

USER  INSTRUCTION MANUAL

TUMBLE DRYER
DUK001W

Galanz

Galanz (UK) Ltd
www.galanz.co.uk


Galanz

Please read this manual carefully before use and keep it for further reference

PREFACE

Thank you for choosing our dryers. Please read this manual carefully. It provides instruction, and maintenance. Retain it for future reference. Record the model and serial numbers of your machine. Quote this information to your dealer if you require service.

The following symbols are used in this manual:

 **Important information concerning your personal safety and information on how to avoid damaging the appliance**

 **General information and tips**

 **Environmental information**

Contents

Safety information.....	1
Product description.....	4
Control panel.....	5
Use.....	6
Drying hints.....	10
Drying programme.....	11
Care and cleaning.....	12
Troubleshooting Guide.....	13
Technical data.....	14
Installation.....	16
Environmental Concerns.....	17
Guarantee/Customer Service.....	18
Electric diagram.....	20

Safety Information

Before Use

⚠️ WARNING

Read and understand thoroughly these safety instructions before use. The items indicated here are very important safety precautions which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty or any liability.



The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.


Children of less than 3 years should be kept away unless continuously supervised.

The rear surface of the appliance shall be placed against a wall.

The appliance must not be supplied through an external switching device, such as a timer.


⚠️ Possible Electric Shock

- Disassembly, repair or modification must not be carried out by people other than qualified technical staff.
- The household electrical supply system should include safety devices such as a fuse and the specifications and safety details provided should meet requirements of the dryer operation under normal load.
- The power plug must be connected to a three-core socket with an earth wire and must be grounded properly and reliably.
- If the supply cord damaged, it must be replaced by the manufacturer, its service agent similarly qualified persons in order to avoid a hazard.
- Don't disconnect the power plug by pulling the supply cord. Remove using the plug.
- Don't use the supply cord when connecting the power plug if the supply cord is loose.
- Don't touch the power plug with wet hands. Wipe dust or water drops off the power plug with a dry cloth.
- Don't over-bend the supply cord or put it under stress.
- Don't use the supply cord/socket/power plug if it is damaged or broken.

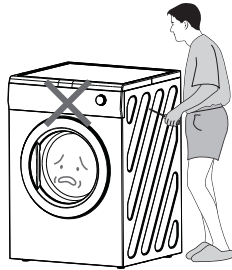

⚠️ Possible Explosions

- Don't put combustible liquids such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes contaminated with these liquids into the appliance.
- Don't connect / disconnect the power plug when leakage of gas or other combustible gas occurs.

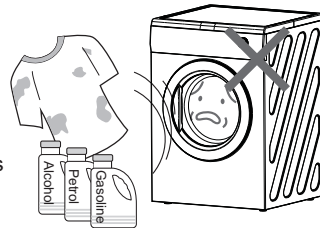


Safety Information

Before Use

⚠️ Fire Accidents/Short Circuit Or Electric Leakage May Occur

- Do not install the appliance close to fire or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in areas prone to damp or rainfall as water on the electrical components can damage the appliance and / or cause accidents.
- Do not install the dryer in places under direct sunlight as this can damage the plastic and rubber components.
- Do not use water jets on the appliance when cleaning it.
- In order to avoid danger of fire caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- When using stain remover on your laundry, ensure you run an extra rinse cycle prior to loading the tumble dryer.
- Ensure all pockets are empty prior to loading laundry into the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Ensure the openings in the base are not obstructed by carpets.
- The hot air discharge from the dryer cannot be shared with other exhaust passages from devices that burn gases or other fuels.

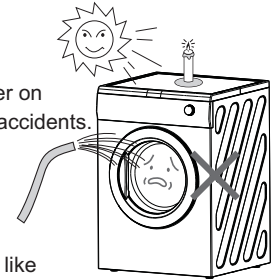


Warning

Never stop a tumble dryer before the end of the cycle unless all items are quickly removed and spread out so that the heat is dissipated

⚠️ Personal Injury May Occur

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To avoid danger to children, ensure all packaging is disposed of safely.
- Ensure children under 3 years of age are supervised.
- Wait until the drum has stopped completely prior to removing laundry from the dryer.
- Children and pets should be kept away when the dryer is working to ensure they do not become trapped. Always check the drum carefully before closing the door.

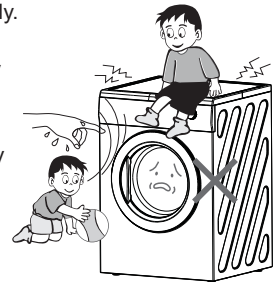

Safety Information


Before Use

! Other Instructions

- This appliance is designed for washable fabrics which are designed to be machine dried. Follow the instructions on garment labels.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer as this may deform the face panel and plastic components.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use or before cleaning and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Lint must not be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer door is restricted.
- Adequate ventilation must be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- For items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, use a spot detergent before placing in the dryer.
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil.
- Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.
- Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics containing vegetable or cooking oil or items that have been contaminated by hair care products are to be placed in the tumble dryer, first wash the item in hot water with extra detergent as this will reduce, but not eliminate, the hazard.

Product description

Before Use

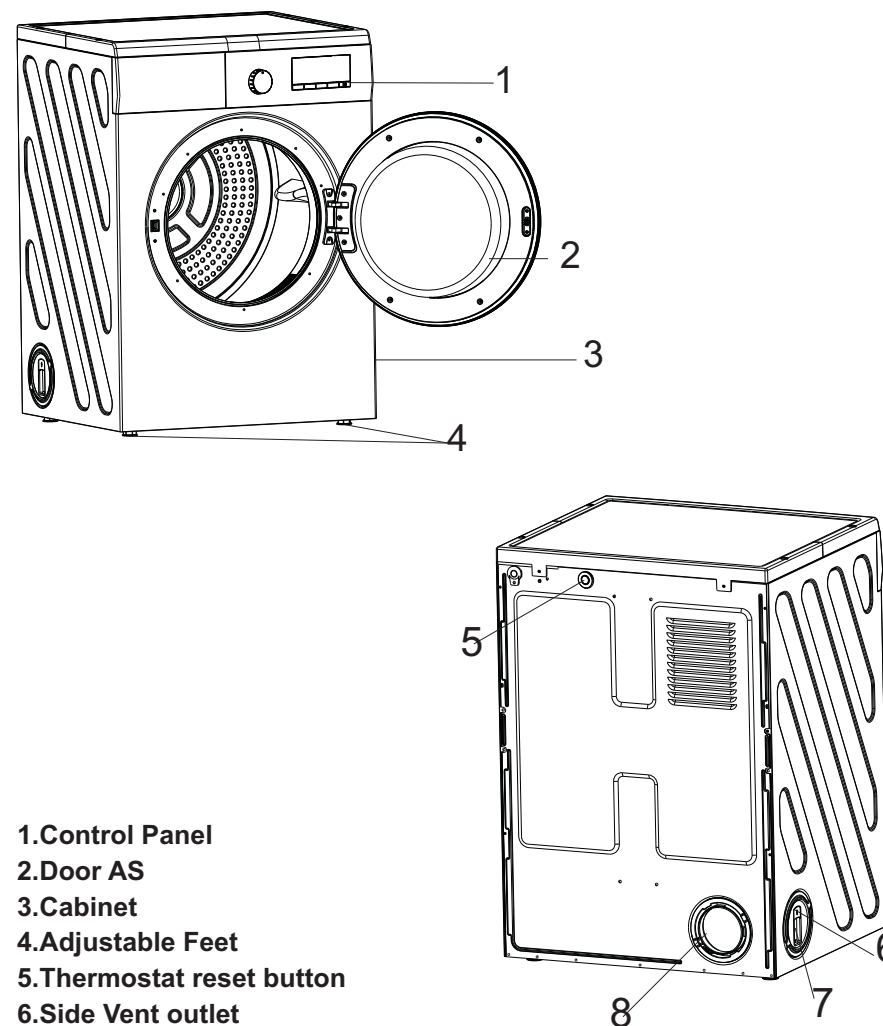


1. Control Panel
2. Door AS
3. Cabinet
4. Adjustable Feet
5. Thermostat reset button
6. Side Vent outlet
7. Vent Pipe over
8. Rear vent outlet

Control panel

Use Process

Control panel

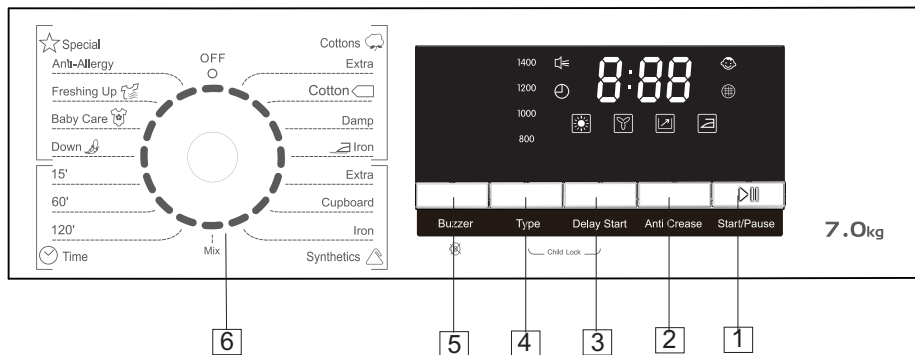

1. Start/Pause
2. Anti-Crease
3. Delay Start
4. Type
5. Buzzer
6. Programme selector Dial


i First Use

- Ensure that electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time. We recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

i Daily Use

Connect The Appliance

- Open the door (see picture).
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter.

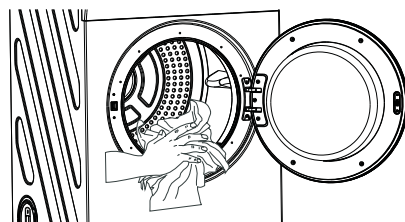


Use

Use Process

Select The Required Programme

- Turn the programme selector dial to the required programme. The corresponding light starts to flash. The programme will be switched off if you have not pressed any button for 5 minutes.

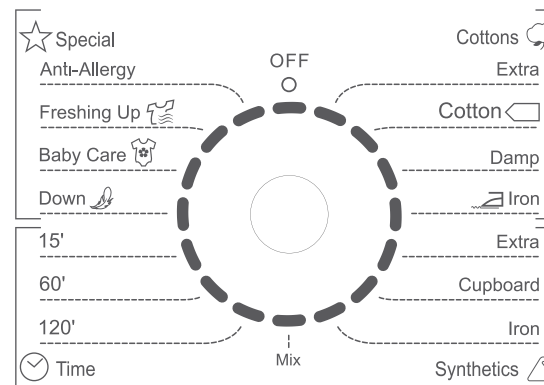

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time
- Special

Note:

"Cotton" is for the "standard cotton programme". The programme is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

Automatic Controlled Drying

- You can choose different programme base on your different clothes materials. The device has the function with sensor the moisture in order to automatically adjust the drying time for optimal drying.
- This automatic control system is fit for most programme except Time.

Time Controlled Drying

- You can choose the time of drying according to the actual situation, the knob is turned to the Time, and you can also increase it to the desired time by pressing the Time button. This automatic control system is fit for most programme except Time.
- To cancel a programme which is running, turn the programme selector dial to "off". At the end of drying, turn the selector dial to "off" to switch the machine off before removing the laundry.

Programme Option Buttons

- Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding indicator lights come on. When they are pressed again, the indicator lights go out.

Select Buzzer

- The buzzer can be selected during normal use. Press the "Buzzer" button to turn off the buzzer and corresponding light. Press once again to activate the buzzer and corresponding light. A sound will be emitted.

Select Dry Type

 
- This button allows you to select the drying programme depending on the rotating speed of washer. The higher rotational speed, the shorter the corresponding drying time.

Select Anti Crease

- Anti-crease is a default setting at the end of each programme. Longer Anti-crease can be selected while the programme is in standby or running.

Select Delay start

- This button allows you to delay the start of the programme by up to 24 hours (each time the button is pressed the time is increased by 1 hour). This option must be selected after setting the required programme and before pressing Start/Pause to commence drying. When Start /Pause is pressed, the corresponding indicator lights start to flash and countdown begins.



The countdown begins after you have pressed the Start/Pause button. The corresponding light illuminates when you have pressed this button. All indicator lights go out except Delay Start pilot light.

Select Start/Pause

- Select the required programme options and press the Start/Pause button to commence drying. The dryer will pause after pressing the button again or opening the door while the programme is running. When the machine is suspended, Programme Selection Dial and other keys are invalid except Start/Pause, Anti Crease and Buzzer keys. To re-start the programme, press the Start/Pause button once again.

Display

The display shows the following information:

Programme duration

After you have selected the programme, it's duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the programme starts, the remaining time is displayed.

Delay start

- If you have selected a delay time, the remaining time is displayed. Once you press the "Start/Pause" button, the appliance will start the delayed process. If you want to check the programme selected, please press the "Start/Pause" button once more and the time of selected programme shows.

Incorrect option selection

- If you select an option that is incorrect or not compatible with the programme you have selected, the sound "Bi, Bi, Bi" will be emitted and the display shows Ers (error).


Indicator lights

These lights indicate the following functions:

- Drying light "☀", This light indicates that the appliance is in the drying phase.
- Cooling light "☁", This light indicates that the appliance is in the cooling phase. At the end of drying, there is 10 minutes cooling phase to cool the laundry.
- End of programme light "☑", This light indicates the end of the cooling phase. This phase contains a 30 minute default anti-crease function with the exception of the Cotton programme. Clothes can be removed at any time.
- Anti Crease light "📏", This light indicates when the Anti-Crease function is selected and is in addition to the Cotton programme
- Filter light "🌀", This light illuminates on every cycle to remind you that the filter must be cleaned at the end of the programme.
- Child Lock light "🔒", This light indicates that the appliance is locked.
- Buzzer light "🔊", This light indicates when the buzzer function is selected. The Buzzer status default is on.
- Delay Start light "⌚", This light indicates when the delay start programme is selected.
- Dry Type light "800, 1000, 1200, 1400" This light indicates when the Type function is selected. When you choose different drying intensities, the corresponding indicator light turns on.

Thermostat reset

If during operation, the heating element doesn't work, the manual thermostat may have been activated. To reset, first turn the programme selector dial to the position "Synthetics Light" and press the start button. Approximately 20 minutes later, press the thermostat reset button as shown.

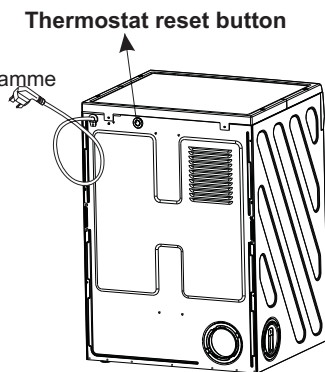

At The End Of The Programme

All drying programmes end with a 10 minute cooling phase. If the laundry is not removed at the end of the cycle, the dryer runs the anti-crease phase (default: 30 minutes, elect: 120 minutes). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-crease phase. The display shows "End" and the buzzer sounds for 15 seconds when the buzzer function is on. To finish, turn the programme selector dial to off.

Important:

If the door of the appliance is opened while the programme is running, the "Start" button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

After Each Use

Important:

If the drying programme has to be stopped before it reaches the end, to avoid a build-up of heat inside the appliance, we recommend that you turn the dial to "OFF", then to "Refresh" and then depress the "Start/Pause" button.

Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to "OFF". Select the new programme and press the "Start/Pause" button.

Attention: "- -" signals the dormant state





- Standby mode without any operation for 10 minutes automatically enters the dormant state.
- Controller shows "End" without any operation for 10 minutes and automatically enters the dormant state.

i Drying Hints

Before Loading Laundry

Never tumble dry delicate items such as net curtains, wool, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, quilts, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

Always follow the instructions on garment labels:

-  May be tumble dried
-  Delicate drying (low temperature)
-  Normal drying (high temperature)
-  May not be tumble dried
- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them.
- Close press studs, zips, hooks, tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, e.g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little after drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residue, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes - this will be necessary particularly for multi-layered items (e.g. collars, pockets, etc.)

During Laundry

- Make sure that no metal objects are left in the laundry (e. g. hair clips, safety pins, pins)
- Close pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.
- To avoid laundry becoming tangled close zips, button up duvet covers and tie loose ties or ribbons (e. g. of aprons).
- Turn items with double-layered fabrics inside out (e. g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.
- Remove all objects from pockets such as lighters and matches.

Maximum Loads

Recommended loads are indicated in the programme charts.

General rules:

- Cotton, linen: drum full but not too tightly packed;
- Synthetics: drum no more than half full;
- Delicate fabrics and woollens: drum no more than quarter full.


Try to load the maximum capacity of the machine as small loads are uneconomical.

WARNING: The appliance must not be plugged into an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Drying Programme

Use Process

Drying Programme

Programme	Max load	Description Of Programme
Cottons	Extra	7kg Drying bathrobes, towels, jeans, work clothes.
		7kg Drying bathrobes, towels, jeans, work clothes.
	Light	7kg Drying shirt, T-shirt, cotton trousers.
	Iron	7kg Drying knitted items, cotton shirts.
Synthetics	Extra	3.5kg Drying sheet, bed linen, table linen, starched laundry.
	Cupboard	3.5kg For sheets, tablecloths, synthetic items.
	Light	3.5kg For synthetic items.
Mix	Mix	3.5kg For knitted items, shirts.
Time	15,60,120	7.0kg Drying thick or multi-layered textiles, e.g. terry towelling items and individual items of laundry or for small volumes
Special	Down	3.5kg For down items.
	Baby Care	3.5kg For silk items.
	Freshing Up	1.5kg For refreshing or gently cleaning textiles.
	Anti-Bac	2.0kg For underpants, shirts.

If the weight of laundry is less than 1 kg it is more efficient to select the " Time controlled Drying " programme.

Laundry Weights

Bathrobe	1600g	Night Dress	265g
Napkin	130g	Ladies' Briefs	130g
Quilt Cover	930g	Men's Work Shirt	800g
Sheet	665g	Men's Shirt	265g
Pillow Case	266g	Men's Pyjamas	130g
Tablecloth	330g	Blouse	665g
Towelling Towel	265g	Men's Underpants	130g
Tea Cloth	130g		

Care And Cleaning


Use Process

Care And Cleaning

- You must DISCONNECT the appliance from the electricity supply before you can carry out any cleaning or maintenance work.
- Don't clean the dryer by directly spraying water onto the dryer. Don't clean the dryer with benzene, thinner, alcohol or acetone as these can cause discoloration, deformation, damage, electric shock or fire.
- When cleaning the product, be sure to unplug the power cord.
- During the drying cycle, the control panel or the door may accumulate moisture.

Humidity Sensor

In order to function correctly, the humidity sensor must be kept clean. Please clean regularly (refer to diagram).

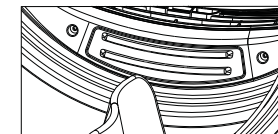

Control Panel


- Clean with a soft, damp cloth. Do not use abrasive substances.
- Don't spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products. Apply such products away from your dryer and wipe up any spills or overspray immediately.

Stainless Steel Tumbler

- To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
- Remove the cleaner residue and dry with a clean cloth.

Cleaning The Door

- Clean periodically the interior part of the door to remove any fluff.
- Accurate cleaning ensures correct drying.

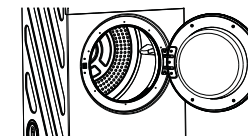


Dryer Exterior

- The dryer has a high-gloss finish. Clean with a soft, damp cloth. Don't use abrasive substances.
- Protect the surface from sharp objects as they may scratch or damage the finish.
- Don't place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

Warning Do Not Use Without The Lint Filter

Cleaning The Filter

- Pull up the housing and open to remove the lint filter.
- Clean lint, fibre and cotton strands by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.
- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for extended periods. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.
- The lint trap must be cleaned frequently.

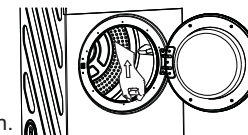

Warning Always clean the lint filter and the inner surfaces of the loading door after each drying process.

Troubleshooting Guide

Use Process

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Center, please carry out the checks listed below.
- During machine operation, if the appliance stops suddenly it is an indication that the machine is not working correctly. Refer to the table below and, once the problem has been rectified, press the Start/Pause button to restart the programme.

Malfunction	Possible Cause	Solution
Dryer does not work	<ul style="list-style-type: none"> • Mains plug is not plugged in. • Loading door is open. • Have you pressed the ► button? 	<ul style="list-style-type: none"> • Plug in at main socket. • Close loading door. • Press the ► button again.
Drying results unsatisfactory	<ul style="list-style-type: none"> • Wrong programme selected. • Filter clogged. • Incorrect volume of laundry. • Sediment on humidity sensor. 	<ul style="list-style-type: none"> • Select a different programme the next time you dry(see "Drying Programme "section). • Clean lint filter. • Observe recommended loading volumes.
Drum light does not work(option)	<ul style="list-style-type: none"> • Light bulb is defective. 	<ul style="list-style-type: none"> • Replace light bulb.
Drying cycle ends shortly after programme starts. "END" light illuminated.	<ul style="list-style-type: none"> • Not enough washing loaded or washing load is too dry for selected programme. 	<ul style="list-style-type: none"> • Select higher drying level(e. g. Heavy instead of Strong)
Drying cycle lasts an unusually long time	<ul style="list-style-type: none"> • Load volume is too big. 	<ul style="list-style-type: none"> • Reduce load volume.

i If you are unable to identify or solve the problem contact our service center. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Center will require this information.

IMPORTANT: If you call out an engineer to a fault listed above, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Technical data

Appendix

Technical Data

Note: All the following data in the table is based on results tested in according with En61121:2013 standard. This data may vary on products due to the following: different laundry type, residual moisture, environmental conditions and voltage fluctuation.



Dry Capacity (kg)	7.0
Electrical connection Voltage-Overall power-Fuse	Information on the electrical connection is given on the rating plate
Depth with loading door open(mm)	1030
Power(left-on mode)(W)	0.78
Power(off mode)(W)	0.72
Energy consumption at full load(kWh)	4.29
Programme time at full load(min)	152.3
Dimensions(W*D*H) (mm)	595*555*850
Ambient Temperature range(°C)	5 ~ 35

Procedure

It is dangerous to alter the specifications or attempt to modify this product in any way.

- ⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- ⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- ⚠ **IMPORTANT:** The appliance must not built-in.
- ⚠ **Unpacking:**All packing must be removed before using the appliance.
- ⚠ Should the appliance be moved, it must be transported vertically.

Check Accessory: Open the accessory bag and check the accessories.

Accessory	Name	Quantity
	Vent Hose	1
	Manual	1

Earth Note

This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock. The power cord has grounding wire attached to the plug. The plug must be inserted into a properly installed and grounded socket (in accordance with all local rules and standards).


Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine. Whilst drying, the tumble dryer will expel a certain amount of warm, very moist air and this should be removed from the room as quickly as possible to prevent condensation. In an extremely well-ventilated room or close to an open window, this may occur naturally. However, in general, it is better to carry the dryer's exhaust outside via the vent hose supplied with the appliance; ending either temporarily at an open window, or permanently at a fixed ventilation grille, fitted to an exterior wall or window.

The tumble dryer must be installed in a clean place, where dirt does not build up. Make sure there are no obstructing items or material near the air-intake louvres provided at the back (e.g. paper, rags etc). To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Note If the floor is uneven, adjust the adjustable feet. Do not put any wooden pieces or other objects under the feet or base.

- When pressure is applied to the edge of the machine it should not shake (please check in two directions). If shaking is present re-adjust the adjustable feet.

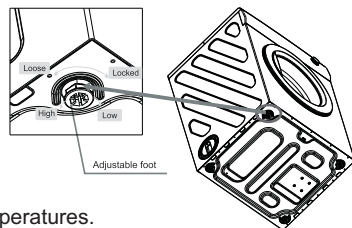

IMPORTANT:

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

Removing Transport Safety Packaging Foam


Caution!

Before using the machine, the packaging foam must be removed from the drum.


- Open the loading door.
- Pull off adhesive strips on top of drum from inside machine.
- Remove the two packaging foams from inside machine.

Fitting The Vent Hose

To simplify the installation, there is a choice of vent outlets: one at the back, the other in the left hand side. Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, aligning arrows of hose and ring nut, fastening by screwing hose to the direction of arrow and pushing it firmly back into place. The unused vents should now be sealed with the special snap cover (B) provided.

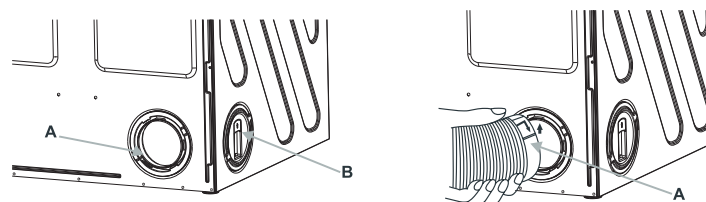

If the hose is long and the room temperature low, the moisture might condense inside the hose. This is an unavoidable natural phenomenon. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (dia.3 mm) in the lowest point of the hose and to place a small container below it. (See picture, point B). Once connected to the dryer, run the vent hose to the desired outlet point, ensuring it contains no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builder's merchant should be able to supply you with the necessary fittings and installation advice.

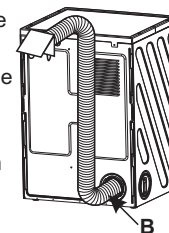


- It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.

Note that to avoid condensation problems, it is essential that the dryer is fitted with the flexible hose to carry hot air outside the kitchen. In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate.

Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

 **Note** | THIS APPLIANCE MUST BE EARTHED

 **The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow-Earth

Blue-Neutral

Brown-Live

The wire coloured green and yellow must be connected to the terminal marked with the letter or by the earth symbol or coloured green and yellow.




Warning


- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection


In case of permanent connection it is necessary that you install a double pole switch. The switch must not break the yellow and green earth cable at any point.

Packaging Materials

- The materials marked with the  symbol are recyclable.
 - >PE<=polyethylene
 - >PS<=polystyrene
 - >PP<=polypropylene
- This means that they can be recycled by disposing of them properly in appropriate collection containers.
- Old machine

Use authorized disposal site for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

- The symbol  means: caution, risk of fire, oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or that have been contaminated by hair care products are to be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce but not eliminate the hazard.

Ecological Hints

To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.

Standard Guarantee Conditions




The manufacturer's warranty on this product is only valid on the condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- This guarantee is in addition to your statutory and other legal rights.

This Guarantee Does Not Cover

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of our manufacture which are not marketed by us.

Marking Explanation

V	Volt	~	Alternating current		
W	Watt	Hz	Hertz		
	Tested safety		CE marking		risk of fire

