

Galanz

REFRIGERATOR INSTRUCTION MANUAL

Model No.:

GLR76TBKE/GLR76TS1E/GLR76TWEE

To ensure proper use of this appliance and for your safety,
please read the following instructions completely before
operating this appliance.

TABLE OF CONTENTS

Parts and features.....	1
Important safety instructions.....	1
Important grounding instructions.....	3
Installation instructions.....	3
Instructions for usage	4
Cleaning.....	4
Defrosting.....	5
Disconnecting the appliance.....	5
Vacation.....	6
User notifications	6
Moving the refrigerator.....	7
Troubleshooting tips.....	7
Reversing the door.....	9
.....	10
Maintenance.....	11
Instruction for the door closer.....	12
Specifications.....	13
Limited warranty.....	14

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
6. This appliance should be serviced only by qualified service personnel. Contact your nearest authorized service facility or call our toll-free customer service number for information on examination, repair, or adjustment.
7. Do not cover or block any openings or air vents on this appliance.
8. Do not store this appliance outdoors. Do not use this appliance near water. For example, do not use near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
9. Do not locate this appliance near heat sources or open flames.
10. Do not use or store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
11. Do not place heavy objects or magnet items on top of the refrigerator.
12. The refrigerator of this product is R600a, which is flammable. Make sure not to damage the cooling system during the transportation and installation.
13. To minimize the risk of possible ignition due to improper service or the use of incorrect parts, this unit must be serviced by factory authorized personnel only.

SAVE THESE INSTRUCTIONS!!

IMPORTANT SAFETY INSTRUCTIONS

1. When gas leaks from its container, don't pull the plug, out or, in for, it may spark and cause a fire hazard.
2. Don't splash water on the rear of the appliance, for it may cause malfunction or electric shock.
3. Don't store inflammable materials such as ether, benzene, LP gas and glue etc in the refrigerator.
4. Don't place bottled beverage in the freezer, so as to prevent breaking.
5. It is better not place object on the top of appliance which is magnetic, heavy, or filled with water. Electronic components may not work steadily if water gets inside. Do not store object which is costly or dangerous, e.g. serum, backdoor and so on.
6. The refrigerator of this product is R600a, which is inflammable. So make sure not to damage the cooling system during the transportation and installation.
7. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

 


Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

3. Choose a location that is not exposed to direct sunlight, high temperatures, heat sources such as a stove or radiator, or in a moist area. Do not choose a location where the temperature will go below 59°F as this could cause the refrigerator to not function properly.
4. Leave a minimum of 1/2" between each side of the appliance and the wall. The top and back of the appliance should have a minimum of 1 1/2" clearance. This allows for proper air circulation. This appliance is intended to be free-standing and should not be built-in or placed in a recessed area.
5. The refrigerator legs must be adjusted during installation in order to function properly. The leveling legs on the front corners can be adjusted by turning clockwise to raise the appliance, and counter-clockwise to lower it. Be sure to have the appliance slope slightly backward to ensure that the door closes tightly.

INSTRUCTION FOR USAGE

The temperature of refrigerator can be controlled manually by the knob. However, the number shown on the knob does not directly represent the temperature. Instead, the larger the number is, the lower the interior temperature will be. 0 stands for off. Turn the knob to level 1 when it's normal, turn it to the level 4-7 a lower interior temperature is required; contrarily, lower to 4-1, when a higher one is needed.



CLEANING

Interior

Clean the interior of the appliance with a mixture of warm water and baking soda, using about 1 ~ 2 tablespoons per quart of water. Use a sponge or soft cloth and be sure to wipe up excess moisture under before cleaning around the controls.

Rinse thoroughly with warm water and dry with a clean, soft cloth.

Exterior

The exterior surface can be cleaned using warm water and a mild detergent. Rinse thoroughly and dry with a clean, soft cloth.

4

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

2. Discontinuation during vacation
Please remove the easily rotten food from the fridge before short vacation. After confirmation, close the door firmly. For a long vacation, please remove all the food and cut off the power. After defrosting, clean up the liner of the appliance and wipe it dry, and leave the door open.
3. Stop using
If the refrigerator is stopped after using for a long time, please unplug the outlet and clean the refrigerator. The door should be kept open in order to prevent unpleasant smell caused by food remnants.

Attention Under general condition do not stop and restart the appliance frequently. After switching off the power, please leave at least 5 minutes before resumption.

VACATION

Before leaving on any vacation, remove food that could spoil while you are gone. If you plan to be gone for an extended period of time, we recommend that all of the food should be removed from the appliance and it should be turned off and unplugged from the outlet. Clean the interior according to the directions provided in the cleaning section of this manual, and leave the door open.

USER NOTIFICATIONS

1. Do not splash water on the refrigerator, as it will cause oxidation and malfunction. Electronic component such as on/off button should be wiped dry.
2. Cleaners such as soap powder, abrasive cleaning powder, alkali cleaners, chemical cloth, alcohol, and petroleum product and hot water should not be used to clean the refrigerator as they may damage the painted cover and plastics.
3. Smear can damage the interior plastic component, so wipe it as soon as possible.
4. Please check the points below after maintenance:
 - (1) Is there any damage or loss of the electronic wire?
 - (2) Can the plug be put in the socket reliably and smoothly?
 - (3) Is the plug heating unconventionally?

Warning Please get rid of the gasket of the door before the disposal. The disposed apparatus should be handled by professional staff, as it may be harmful to the environment.

6

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

Problem	Possible Cause	What to do
Compressor runs too long, or cycles on and off frequently.	-Hot weather -Door opened too frequently -Door not closed tightly	-This is normal -This is normal -Check to be sure nothing inside the refrigerator is preventing the door from closing -Adjust temperature to a warmer setting
Moisture forms on the outside of the appliance	-Temperature control set at coldest setting -Large amounts of food placed in refrigerator -The door is slightly open	-This is normal -Wipe the surface dry using a soft cloth -Close the door tightly
Moisture forms on the inside of the appliance	-This is normal during periods of high humidity -Door is opened too long or too frequently	-This is normal -Do not open the door too long or too frequently
Vibration noise	-Refrigerator is on an uneven surface -Refrigerator is touching a wall	-Adjust the leveling legs -Move the refrigerator away from the wall

The following are normal conditions that can be encountered during the operation of this appliance:

- The flow of refrigerant through the coils can cause a noise.
- The sides of the appliance may become warm as a result of the cooling function.

8

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

12. Remove the middle hinge.
13. Use a solid plug around the hole to pull it out. Pull out the plug hole and save them in some space.
14. Slightly backward the machine against the wall.
15. Take off the 2 fixed feet.
17. Assemble the bottom hinge in the other side of the machine.
16. Take off the bottom hinge.
18. Fixed up the feet.
19. Exchange the 2 bolts and fixed them in the other sides.
20. Remove the fixed plate of hinge on the bottom door, and fix it on the other side.
21. Fix up the bottom door on the outside bolts.
22. Fix up the middle hinge on the bottom door.
23. Put the bottom door into the left side in correct way.
24. Close the bottom door.

10

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

- The displacement of interior light. Uninstall the cover and replace the light with a screwing light (E12, 120V/10W). Consult the following pictures:
1. Pry the bulb on the thermostat away from the lamp shade about 2mm with the tool.
 2. Meanwhile take another side as the center to rotate the lamp shade outwards.
 3. Take out the lamp shade along the direction of the arrow.
 4. Rotate and take out the bulb in counterclockwise direction.
- INSTRUCTIONS FOR DOOR CLOSER**
- The left door closer The right door closer Tapping screws
- The door is set to open from the left side. If the door is switched to open from the right side, then please follow the below instructions:
1. Remove the tapping screws of the right door closer, and take out the right door closer.
 2. Install the left door closer, and fix the door closer on the door through the tapping screws.

12

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

- ### Limited Warranty
- This warranty applies to products purchased and used in the U.S. This is the only express warranty for this product and is in lieu of any other warranty.
- This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, except as noted below. During this period, we will repair or replace this product at our option.
- This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect including failure to clean product regularly in accordance with manufacturer's instructions, use for commercial purposes, or any use not in conformity with the printed directions.
- We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.
- If you have a claim under this warranty, please call our CUSTOMER SERVICE NUMBER. For faster service please have model series, and type numbers ready for operator to assist you.
- CUSTOMER SERVICE NUMBER**
In the U.S. 800-562-0738
- KEEP THIS NUMBER FOR FUTURE REFERENCE!**
Warrantor: Zhongshan Galanz Consumer Electric Appliances Co., Ltd, Guangdong 528429

14

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

SAVE THIS INFORMATION FOR FUTURE REFERENCE

Galanz


Compact Refrigerator

Important notice: Please keep this appliance standing upright during transportation. If the unit must be laid on its side at any time, please stand the appliance upright for at least 4 hours before using.

For all consumer questions or inquiries, please contact our U.S. customer service line at **800-562-0738**.

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

PARTS AND FEATURES

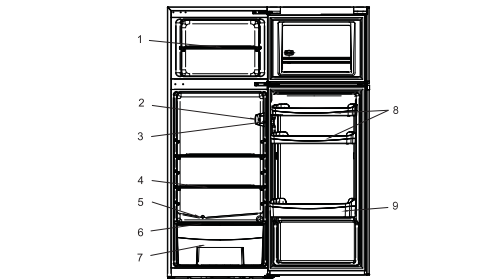

1. Freezer shelf
2. Lamp and temperature control knob
3. Lamp switch
4. Glass shelf
5. Drain tube plug
6. Crisper glass cover
7. Vegetable crisper
8. Middle bottle guard
9. Big bottle guard

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and/or injury to persons, including the following:
Read all instructions before using the appliance.

1. This appliance must be grounded. Connect only to properly grounded outlet. See Important Grounding Instructions on page 3.
2. Install or locate this refrigerator only in accordance with the provided Installation Instructions.
3. To protect against electric shock, do not place cord, plug, or refrigerator in water or other liquid.

1

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

DANGER! RISK OF CHILD ENTRAPMENT

Before you throw away your old refrigerator or freezer:

1. Take off the doors.
2. Leave the shelves in place so that children may not easily climb inside.

Refrigerators

All refrigeration products contain refrigerants, which under federal law must be removed prior to product disposal. If you are getting rid of an old refrigeration product, check with a qualified disposal company for instructions.

IMPORTANT GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING- Improper use of grounding can result in a risk of electric shock.

1. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.
2. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked electrical rating of the extension cord shall be equal to or greater than the rating of the appliance.



Three-pronged (grounding) plug
Properly polarized and grounded outlet

INSTALLATION INSTRUCTIONS

1. Before using the refrigerator for the first time, remove all of the packing materials, including the foam base and adhesive tape holding accessories in place.
2. The refrigerator should be located on a firm, flat surface that is strong enough to support the refrigerator when it is fully loaded.

3

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

Door Gasket

The door gasket must be kept clean to ensure a proper seal. Be sure to clean the gasket frequently, using the method described above.

DEFROSTING

Frost build-up on the walls of the freezer section will increase energy consumption and reduce the efficiency of the appliance. Defrost the freezer section whenever the frost reaches a thickness of 1/4".

1. Remove food from the refrigerator and freezer compartment.
2. If your model has a drip tray, be sure to place it under the freezer compartment to collect water. It may be necessary to empty the drip tray during the defrosting process.
3. Turn the unit off and unplug it from the outlet.
4. The defrosting process can take several hours. Open the door to speed up the process.
5. When defrosting is completed, wipe the compartment with a soft cloth to remove any remaining water.
6. Reset the refrigerator temperature, following the operating instructions on page 4.

ATTENTION: Do not use sharp or pointed objects to remove frost or ice from the surfaces of the freezer compartment. This can cause damage to the compartment walls and cooling coils, and will void the warranty.

DISCONNECTING THE APPLIANCE

After power failure, even in summer, the refrigerator can store food normally for several hours.

1. Discontinuation during power failure
After power failure, do not put additional food in the appliance and reduce the frequency of door opening. Make ice in a container if the power failure is known beforehand.

5

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

MOVING THE REFRIGERATOR

1. Turn off the refrigerator and unplug from the outlet.
2. Remove all food and securely tape down all loose items inside.
3. Tape the door shut.
4. Do not lift or pull the door or door handle during transportation.
5. When moving, the appliance can not be tilted over 45 degrees as possible damage to the sealed system could occur.
6. Take care to avoid strong vibration or impact to the appliance.

TROUBLESHOOTING TIPS


Problem	Possible Cause	What to do
Refrigerator does not operate	-Not plugged in tightly -Tripped circuit breaker or blown fuse -Problem with electrical outlet	-Unplug, wait 10 seconds, then plug in again -Replace fuse or reset circuit breaker -Consult with a professional electrician
Refrigerator seems too warm/food does not seem to cool	-Temperature setting may be too warm -Door opened too frequently -Door not closed tightly -Warm weather	-Lower the temperature setting -This is normal -Check to make sure nothing inside is causing the door to not close -This is normal

7


Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

REVERSING THE DOOR

- You can choose to open your refrigerator by the right side or the left one. To change the way of opening, please follow the below instructions
- Important safety warning: Before doing so please unplug and disconnect the appliance. Except the Accessories packed, you still need:
- Medium-sized cross screwdriver
 - Small screwdriver
 - A solid line
- One more person who can help you would be better.
1. Firstly, you need to check if the power connect or not.
 2. Open the upper door, and close the bottom door.

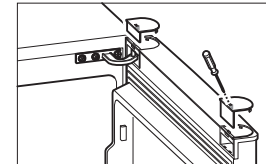

3. Take off the protective covers on both sides of upper cover with a Phillips screwdriver through the back side, and save the protective covers.

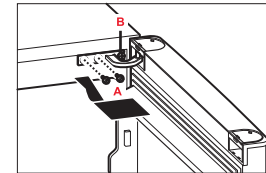

9

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

25. Take off the right closer and fix the left closer in the other side of the upper door.
 26. Put the self-tapping screws in the hinge on the door opening position, but not fixed.
 27. Fixed up the upper door in door bolt which is near the middle hinge.
 28. Twist the upper hinge carefully inside the blank position of the door.
 29. Fix up the upper hinge with screw B, and fix up the self-tapping screw A.
 30. Assemble the protective box in the upper cover of the upper door.
 31. Check all parts of the door if they are fixed up enough. You can use a paper insert inside every parts of the door related, see if the paper drop down easily, make sure the paper won't drop down.
 32. If the tightness on every parts is uniformly, you can pull the obstructions by hand after hitting with hair-dryer in related parts which has problem.
- MAINTENANCE**
- The appliance should be maintained and cleaned frequently. For your safety, do please pull the plug out of the socket before the cleaning.
1. Interior maintenance
Clean the interior of the appliance with clean water or neutral abluent. Scour it with clean water and wipe it with a piece of dry cloth.
 2. Maintenance of door gasket
It is easy to damage if the door gaskets are polluted by the stain like oil, sauce and etc., so it is better to clean them carefully.
 3. Outer maintenance
Wipe the dusty with a piece of dry cloth, clean it with neutral abluent if necessary.

11

Refrigerator GLR76TBKE/GLR76TS1E/GLR76TWEE Use and Care Manual Support:800-562-0738

SPECIFICATIONS

Electric shock protection type	1
Capacity (cu.ft)	Freezer 1.6 Refrigerator 6.0
Voltage (VAC)	120
Frequency (Hz)	60
Current (A)	1.4
Voice [dBA]	≤42
Energy consumption (KW.h/24h)	0.95
Refrigerant	R600a/1.23 oz
Net weight	99.21 lbs
Interior temperature (F)	Freezer ≤0 Refrigerator 32 ~46.4
Unit dimensions (in inches)	Width 21.61 Depth 22.36 Height 55.59

13

