

# Galanz

@2021 Galanz Americas Limited Company

# Galanz

MODEL: GLCB60ES210A  
COOKING BLENDER USER MANUAL



Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 800-562-0738.

@2021 Galanz Americas Limited Company

# CONTENTS

<b>Important Safety Instructions</b> .....	1
<b>What's in the Box</b> .....	4
<b>Before First Use</b> .....	5
<b>Getting to Know Your Galanz Cooking Blender</b> .....	6
Control Panel	
Smart Program Settings	
<b>Preparing &amp; Using Your Blender</b> .....	8
<b>Care &amp; Maintenance</b> .....	11
Cleaning After Blending	
Storage	
<b>Troubleshooting Guide</b> .....	13
<b>Product Warranty</b> .....	14

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING YOUR GALANZ PROFESSIONAL BLENDER

- To protect against risk of electrical shock do not put cord, plug or any electrical parts in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- The use of attachments, not recommended by the manufacturer may cause a risk of injury to persons.
- Do not use outdoors.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- Always operate blender with cover in place.
- When blending hot liquids or operating in the heating mode, allow appliance to cool before assembling or disassembling parts and before cleaning.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not touch hot surfaces. Use handles or knobs.
- Rotate the lid clockwise to lock into place and counterclockwise to unlock.
- Scalding may occur if the lid is removed during the blending process of hot liquids.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use the unit on a slanted, unstable or non heat-resistant table.
- Check the unit for damages to the power cord, the seal ring of the lid, blade assembly and other parts of the unit before using. If any damage is found, stop using and contact customer service.
- Ensure the blender pitcher, lid and removable center cap are properly locked into place before use.
- Do not pull the power cord. Do not touch the power plug with wet hands to prevent electric shock.

# IMPORTANT SAFETY INSTRUCTIONS

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
- Do not leave the unit unattended, turn off and unplug before leaving.
- Disconnect and unplug the appliance before installing, disassembling, cleaning or storing.
- The pitcher surface may get hot when making hot drinks. Use the handle to remove the pitcher and avoid touching the glass. Do not place your face over the pitcher after blending hot liquids to prevent scalding from steam.
- Always keep hair or loose clothing away from all moving parts. Do not put the kitchen utensils to the working pitcher as utensils may damage the blade assembly or the blender pitcher.
- The use of accessory attachments not recommended by the unit manufacturer may cause injury or damage.
- Do not touch the moving accessories, such as the blade assembly, when the unit is working.
- Do not lift the pitcher or open the lid during operation.
- Do not move the unit when it is working to prevent scalding caused by the overflowed high-temperature liquid.
- Do not run with the glass pitcher.
- Never use the unit to blend non-food items.
- Do not use the pitcher as a container, such as for freezing, cooking or sterilizing.
- Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
- Do not blend food for longer than 6 minutes unless in the Sauté or Soup pre-set programs.
- If abnormal sound, smell or blender base overheating occurs when using the unit, stop using.
- The unit has an overheating protection device. If the unit is abnormally used or overloaded during operation, it will stop working automatically. If it can't work after 30 minutes, take it to the customer service center for repair.
- Do not touch the blade assembly with hands directly. The blades are very sharp and could cause injury to your hand.
- The unit is not intended for use in the plateau areas at over 2000 meters above sea level since it may cause overflowing.
- If the unit stops working abnormally during operating, turn off the unit right away. Unplug and lift the pitcher. This is usually caused by a blockage of the blade. Clear the blockage. Allow it cool before using again.
- Do not put the pitcher into the freezer directly. The low-temperature shall lead to condensation water in the blender base which will damage the unit.
- Do not wash the blender base with water directly. Never immerse the base, pitcher, power cord or plug into water or any other liquid.
- Clean the unit after each use after each use.
- Do not put the accessories into dishwasher, disinfection cabinet or microwave to prevent accessories from deformation or fracture.
- Do not wet the the base of the blender pitcher when cleaning. In case it gets wet, allow it to dry before using.

# IMPORTANT SAFETY INSTRUCTIONS

- Do not clean the unit with chemical substances or volatile chemicals to prevent fading, discoloration or fire.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- The unit is intended for household and indoor use only. Do not use outdoors or for commercial purpose.

**CAUTION: THIS APPLIANCE IS NOT INTENDED FOR DEEP FRYING FOODS!**

## SPECIFICATION


Model	GLCB60ES210A
Power Consumption	120V, 60Hz
Watts	Blending: 1000 W Heating: 800 W
Capacity	60oz / 1.75L
Weight	13.56 lbs / 6.15 kgs
Dimensions LxWxH	10.27 x 8.15 x 15.20 inches 26.1 x 20.7 x 38.6 cm

**HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**


# WHAT'S IN THE BOX

## PRODUCT, PARTS AND ACCESSORIES


### Blender Lid

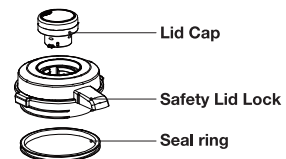


### Glass Pitcher

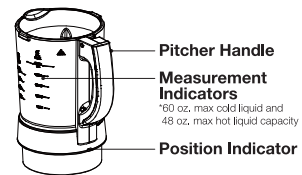

### Accessories

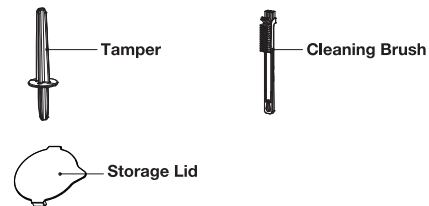

### Blender Base

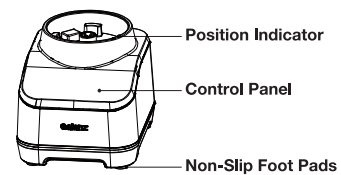

## Before First Use

### BEFORE FIRST USE

**1. IMPORTANT:** Review all warnings in **IMPORTANT SAFEGUARDS** before proceeding.

**2. Remove all packaging material** from the appliance. Separate all parts from each other.

**3. Clean** the pitcher, lid, and accessories with soapy water, follow the steps below to clean the pitcher:

- Connect the power cord to a 120V power source.
- Remove the lid and fill the pitcher with warm water to 32 oz / 1000 ml, as indicated on the pitcher. Add a minimal amount (1-2 drops) of dishwashing soap to the pitcher.
- Place the lid on the pitcher and press down firmly, then turn the lid clockwise until it clicks into place.  
Caution: The lid braces (located on the sides of the lid) must fit over the glass lid-brace catches (located on the pitcher).
- Fit the lid cap into the hole in the lid, turn the lid cap clockwise until it clicks into place.
- Place the pitcher on the blender base.
- Press **Clean** to select the cleaning function. Press **START /STOP** to begin.
- When the program completes, the display indicates **End**.

■ Lift the pitcher up and off the blender base. When the pitcher is removed from the blender base, the display dims.

■ Remove the lid and discard the soapy water and rinse the pitcher out with water multiple times.

## GETTING TO KNOW YOUR GALANZ COOKING BLENDER



### CONTROL PANEL

#### A. Display

**The display includes the following elements:**

1. Smart Program count down timer.
2. Smart Program which will flash when selected.
3. " 🔥 " The flame icon illuminates when the appliance is in a heated blending mode.
4. " 🌀 " The blade icon illuminates when the blades are working.

#### B. Smart Program

Juice	1:40	Frozen Drink	2:00
Smoothie	2:00	Ice Cream	1:40
Sauce	1:30	Sauté	6:00
Soup	20:00	Milkshake	2:00

**NOTE:**

1. Only press the left and right button to select the desired smart program.
2. Above are the default cooking times for each Smart Setting.

#### C. Manual Blending

High, Medium, Low or Pulse speed. Refer to **Smart Program Settings** for details.

#### D. Settings

Clean and Start/Stop buttons. Refer to **Smart Program Settings** for details.

# GETTING TO KNOW YOUR GALANZ COOKING BLENDER

## SMART PROGRAM SETTINGS

### Hot Blending

- Hot blending programs combine heating and blending for optimal one-pitcher performance. Cook fresh ingredients or steamed, pre-cooked ingredients into hot soups, baby food and more.
- Select a Smart Heating Program to cook or blend ingredients: **Sauté and Soup**.

### Cold Blending

- Cold blending programs do not use heat and blend at different intervals throughout the countdown to break down frozen fruits, vegetables, ice and more. Make quick smoothies, juices, frozen drinks and more.
- Select a Smart Program to blend ingredients: **Juice, frozen drink, Smoothie, Ice cream, Sauce and Milkshake**.

## MANUAL BLENDING

Choose the desired blend speed for ultimate control.

- Press the power button behind the appliance.
- Select HIGH, MEDIUM, LOW or PULSE for desired speed.
- Press START/STOP to begin the blending.

### NOTE:

- When using the PULSE function, continue to select blend speed after pressing the PULSE button.
- The Pulse setting will run only when the PULSE button is pressed.

## CLEANING

Allow parts to cool before using the cleaning function.

- Fill the pitcher with warm water to 32 oz / 1000 ml and 1-2 drops of dish soap.
- Place the lid on the pitcher and make sure it is properly closed.
- Press the CLEAN button to begin.
- When program completes, remove the lid and discard the soapy water and rinse the pitcher out with water multiple times.

### NOTE:

DO NOT submerge the blender pitcher in water. DO NOT wash the blender pitcher and motor base in the dishwasher. It will damage the integrated heating element.

### TIPS:

- Give the pitcher a quick rinse before running CLEAN.
- Run CLEAN immediately after use.
- Use the included cleaning brush to avoid direct contact with the blades.

## START/STOP

- Press the button to START the selected function.
- Long press to STOP the operation during a cycle.

# PREPARING & USING YOUR BLENDER

## Plugging in the machine

Place the machine on a clean, dry and level surface such as a countertop or table and plug the base into a 120V power source.

## Prepare the ingredients


Prep ingredients according to the recipe then remove the lid and add ingredients to the pitcher.

### TIP:

Add liquid to the pitcher first, followed by any fresh ingredients than any frozen ingredients or ice. This will allow for optimum blending.

### NOTE:

- The large food should be cut into pieces the size of which is less than 5cm.
- The ingredients should not exceed the max lines on the side of pitcher.

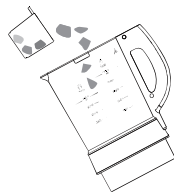

## Install the lid onto the pitcher

Place the lid on the pitcher and press down firmly until it is secure, then turn the lid clockwise until it clicks into place.


### NOTE:

- The lid braces (located on the sides of the lid) must fit over the glass lid-brace catches (located on the pitcher).
- The blender will not start unless the lid is locked in place.



## Install the removable center cap into the lid


Secure the center cap by placing it down into the lid and twisting clockwise until it clicks into place.

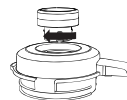

## PREPARING & USING YOUR BLENDER

### ■ Turn on the switch

Lower the pitcher onto the motor base and turn on the switch behind the machine.

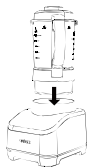

### ■ Select function

1. Use the left and right button to choose the desired preset program.
2. Use the manual program to choose the desired blending speed.

NOTE: The chosen function will display on the LED screen.



### ■ Start operating

Press "START/STOP", Blending begins with a gentle start and the timer counts in seconds.



#### TIPS:

1. The unit blends or heats according to the preprogrammed mode or the desired blending speed, running time and temperature can be set as needed.
2. Use the tamper to push food from sides of pitcher, or release air bubbles that may form during blending.



## PREPARING & USING YOUR BLENDER

### ■ When blending is complete

Press "START/STOP" directly once the desired consistency is reached, or wait until the program completes. Lift up the pitcher from the motor base. To remove the lid from the pitcher, rotate lid counterclockwise out of the lock position and lift up.

#### NOTE:

After heated programs, steam may release as the lid is removed. Keep hands on the outer tabs and lift directly up.



### STATUS MESSAGE

End
















End indicates that the Smart Program has ended.

EE

Refer to [Troubleshooting Guide](#).

## CARE & MAINTENANCE

### CLEANING

Part	Dishwasher Safe (top rack)	Hand Wash	Wipe Clean (damp cloth)
Lid Cap			
Safety Lid			
Pitcher			
Motor Base			
Tamper, Cleaning Brush, Storage Lid			

Allow parts to cool before using clean function.

#### ■ Cleaning the pitcher

Fast cleaning: use "CLEAN" function to clean the pitcher

1.Fill the pitcher with warm water to 32 oz / 1000 ml and 1-2 drops of dish soap.

2.Place the lid on the pitcher and make sure it is properly closed.

3.Press the CLEAN button to begin.

Thorough Cleaning: Unplug the machine and allow it to cool before the cleaning. Clean the pitcher with damp cloth or cleaning brush.

#### NOTE:

1.**DO NOT SUBMERGE THE BLENDER PITCHER. DO NOT WASH THE BLENDER PITCHER AND MOTOR BASE IN THE DISHWASHER.** It will damage the integrated heating element.

2.If the base of the blending pitcher gets wet, wipe dry with a cloth.

3.The blade assembly is very sharp. Be careful to prevent injury.

## CARE & MAINTENANCE

#### ■ Cleaning the Lid

1.Remove the center cap and seal ring from the lid first. Clean all of them with clean water.

2.Do not pull the seal ring when removing to prevent deformation that could affect the sealing.

3.Dry all parts of the lid thoroughly before reassembling the lid to prevent residual water from collecting inside the lid.

#### ■ Cleaning the Blender Base

Clean the blender base surface with a damp cloth. Never scrub the base with steel wool or a cleaning brush to prevent scratches or peeling.

#### NOTE:

1.**DO NOT USE ABRASIVE CLEANERS OR METAL SCOURING PADS.**

Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.

Pieces can break off the coating and touch electrical parts involving a risk of electrical shock.

2.**DO NOT SUBMERGE THE BLENDING BASE IN WATER,** to prevent electrical hazards or damage to the product.

### MAINTENANCE

Allow the appliance to cool and dry completely before storing. If storing the blender for long periods of time make certain that the blender is clean and free of food particles. Store the blender in a dry location such as on a table, countertop or shelf. Other than the recommended cleaning, no further user maintenance should be necessary. Any other servicing should be performed by an authorized service representative.

### STORAGE

Unplug the unit, allow it to cool, and clean it before storing. Store the blender in its box or in a cabinet in a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.



# TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
The unit has no response after power on.	The lid is not installed or locked in place.	Lock the lid in place correctly and tightly.
	The pitcher is not installed in place.	Reinstall the pitcher correctly.
The LED display is illuminated but the unit is not working.	The unit is in overheating protection after the long blending time.	Allow the unit to cool. Operate following the product instructions.
	The lid is not locked into place.	Reinstall the lid in place.
Blade assembly is not working.	Ingredients are is too large or too much.	Power down. Cut the ingredient into smaller pieces or reduce the ingredient
Food is overflowing.	Seal ring is not installed or in correct place.	Reinstall the seal ring correctly.
	In the wrong function or the water is too little or too much.	Power down. Clean up the overspill. Return the ingredients to the pitcher and restart the unit.
	The voltage is too high.	Use electric appliance voltage stabilizer.
	Ingredients are is too much.	Add ingredients referring to the product instructions.
Poor blending effect.	Water is too little.	Add more water.
	The voltage is too low.	Use electric appliance voltage stabilizer
	Ingredients are too hard.	Power down. Remove the hard ingredients and cut into smaller pieces.
	Ingredients are too much.	Add ingredients according to the product instructions.
Food is undercooked.	Ingredients or water are too much.	Add ingredients and water according to the product instructions.
	Electricity-conducting pole of the lid is covered by the food.	Clean up the Electricity-conducting pole.
	The top of base or the bottom of pitcher are wet.	Dry them with dry cloth
"E8" Error code.		It's construction issue. Contact Customer Service at 800-562-0738.

# WARRANTY REGISTRATION

Please mail this warranty card to address below within 30 days of purchase.  
**Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.**

**PLEASE PRINT CLEARLY.**

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Phone \_\_\_\_\_ Email \_\_\_\_\_

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

Purchase Location \_\_\_\_\_

**You must attach a copy of your purchase receipt to validate your registration.**

