	TABLE OF CONTENTS	Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738	<u>Cou</u> <u>B</u> E F
Galanz	Before getting started 1 Specification 1 Important safety instruction	SAVE THIS INFORMATION FOR FUTURE REFERENCE	1. Bef which 2. Cle
COUNTERTOP ICE MAKER INSTRUCTIONMANUAL Model No.: GLCI26S2A3A GLCI26SRA3A GLCI26RDR3A	Important safety tips 1 Name of the parts 4 Operating procedures & maintenance 5 Unpacking your ice maker 5 Connecting your ice maker 6 Care and maintenance 6 Using your ice maker 7 Troubleshooting 8 Warranty 11	Galanz Countertop Ice Maker Important notice: Please keep this appliance standing upright during transportation. If the unit must be laid on its side at any time, please stand the appliance upright for at least 4 hours before using. For all consumer questions or inquiries, please contact our U.S. customer service line at 800-562-0738 .	3. Use
To ensure proper use of this appliance and for your safety, please read the following instructions completely before operating this appliance.			risk of any ap

Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738	Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738	Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738	Countertop
OPERATING PROCEDURES & MAINTENANCE UNPACKINGYOURICE MAKER 1. Remove all exterior and interior packaging. Check that ice basket and ice scoop is included. If any part or accessory is missing, please contact our customer service. 2. Clean the interior with lukewarm water and a soft cloth. Remove the ice basket and wash it in warm water. 3. Find a location for your ice maker that is protected from direct sunlight and other sources of heat(i.e.: stove, furnace, radiator). Place the ice maker on a level surface. Make sure that there is at least 5 inches of space between the back and slides of your ice maker and the wall. 4. Allow one hour for the refrigerant fluid to settle before plugging in the unit.	<u>Countertop Ice Maker GLCI26**A3A</u> Use and Care Manual Support:800-562-0738 Before using your ice maker, it is strongly recommended to clean it thoroughly. The ice maker is not designed to be installed in an outside area such as a garage or a porch. Ambient temperatures of below 50°F or above 100°F will hinder the performance of the appliance. HOW TO CLEAN Remove the ice basket. 1. Pull off the drain plug from the front underside to drain out the water. 2. Clean the interior with diluted detergent, warm water and a soft cloth. 3. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water. 4. Dry the interior and exterior with a soft cloth.	Ountertop Ice Maker GLCI26**A34 Use and Care Manual Support:800-562-0738 On not modify the power cord under any circumstances to allow the unit to be plugged into a non-grounded outlet. To avoid heat damage to the power cord, please ensure that it does not come in proximity or in direct contact with the compressor of the ice maker. Please avoid installing the ice maker in a location where the appliance will come in contact with water or moisture to minimize rusting of metal parts. Drue maker should not be installed near any heat source or in a location where it will come in direct contact with the sunlight. DINCE YOUR ICE MAKER Clean your ice maker thoroughly.	Countertop 6. While the the ice make Press the "Pr Allow 3 minu 7. The ice m indicator will sensor malfu unit where t 8. Change w If unit is not
 5. The appliance must be positioned so that the plug is accessible. CONNECTINGYOURICEMAKER Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service at 800-562-0738. 1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which connects with standard three prong wall outlets to minimize the possibility of electric shock. 2. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician. 3. This appliance requires a standard 115 volt, 60Hz electrical outlet with three-prong ground. 	 5. Put back the drain plug. 6. When the machine is not in use, open water drain cap to drain water completely from water reservoir. CAREANDMAINTENANCE 1. The ice maker should be cleaned on a regular basis. (See:"HOW TO CLEAN") 2. It is necessary to have adequate ventilation space around the ice maker in order to sustain proper performance, dissipation of heat, maintain efficiency, and low power consumption. Clearance of minimum 5 inches should be maintained at the rear and sides of the unit and 8 inches at the top of the unit. 3. To attain proper performance, be sure to plug the appliance into a properly grounded 115/60 Hz outlet. 	 2. Open the cover, remove the ice basket and pour drinkable water (preferably purified water or distilled water) into tank. 3. Plug in the unit and the power indicator light will blink. 4. Press "POWER" on the control panel to begin the ice making cycle. The power indicator light will light. 5. Select the size of the ice cube by pressing the "Select" button. If ambient temperature is below 60°F, it is recommended to select small size to avoid ice sticking together. 	TROUBI PROB "ADD V indicato "TCE F indicato No ice, but indicator is
5	6	7	

ountertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738

FORE GETTING STARTED

before connecting the appliance to the power supply, let the unit stand upright for 1 hour, ch will reduce the possibility of the cooling system malfunctioning due to improper handling. Clean your unit thoroughly before putting into use. (See "How to Clean") se the parts diagram on page 4 to insure proper positioning of internal components.

EFORE GETTING STARTED

Product Description	Countertop Ice Maker				
Model No.	GLCI26S2A3A/GLCI26SRA3A/GLCI26RDR3A				
Color	Stainless Steel/Silver/Red				
Unit Dimensions	Width	Height	Depth		
(Inches)	8.9"	12.3"	13.2"		

PORTANT SAFETY INSTRUCTION

PORTANT SAFETY TIPS

n using electrical appliances, basic safety precautions should be followed to reduce the of fire, electric shock, and injury to persons or property. Read all instructions before using appliance.

1

Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738

1. Do not operate this or any other appliance with a damaged cord.

2. Connect to properly polarized outlets only. No other appliance should be plugged into the

same outlet. Be sure that the plug is fully inserted into the receptacle.

3. Do not run cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.

4. Unplug the ice maker before cleaning or making repairs.

5. Exercise caution and use reasonable supervision when appliance is used near children. 6. Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.

7. Do not tip over.

similar warning sticker as below.

8. If the ice maker is brought indoors from outdoors during the wintertime, give it a few hours to adjust to room temperature before plugging it in.

9. To change the cord, make sure to unplug ice maker or disconnect unit from power supply before removing the cord. Replace the current cord with a new one carrying the same or



Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738

IMPORTANT SAFETY TIPS

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1. Children should be supervised to ensure that they do not play with the appliance.

2. Do not use extension cords or ungrounded (two prong) adapters; 3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent

or similar qualified person in order to avoid hazard.

4. Do not store explosive substances such as aerosol cans with a flammable propellant in

this appliance. - WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure,

clear of obstruction.

- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- WARNING: Do not damage the refrigerant circuit.

- WARNING: Do not use electrical appliances inside the food storage compartments of the

appliance, unless they are of the type recommended by the manufacturer.

- WARNING: Ice-make shall only use potable water.

This appliance is intended to be used in household and similar applications such as: - Staff kitchen areas in shops, offices and other working environments;

- Farm houses and by clients in hotels, motels and other residential type environments;

- Bed and breakfast type environments;

- Catering and similar non-retail applications.

3

Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738 NAME OF THE PARTS


1. Cover: See through window to allow interior visibility. 2. Control panel: Easy to use, visible functions touch display setting.

A) Selected ice size: small or large.
B) Power indicator.
C) Ice Full indicator.
D) Water shortage indicator.
E) Button to turn on/off the unit.
F) Button to select ice cube size.

3. Water drain cap: At front underside of the unit.

4. Ice basket. 5. Ice scoop. 6. Ice full sensor. 7. Air outlet.

8. MAXIMUM WATER LEVEL: -------(Not shown on the below unit image.) Remove the ice basket, you can see the water level mark.

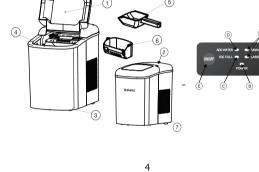

ountertop Ice Maker GLCI26**A	A3A Use	and Care Manual Support:800-562-0738	Countertop Ice Maker G	.CI26**A3A Use a	and Care Manual Support:800-562-0738		Countertop Ice Maker GLC	26**A3A Use ar	d Care Manual Support:800-562-0738	Countertop Ice Maker GLCI26**A3A Use and Care Manual Support:800-562-0738
While the icemaker is on, che	eck water level periodica	ally. If water pump can't inject water,		1						WARRANTY
ice maker will stop automati	tically, and the "Water" i	ndicator will be on	PROBLEM	POSSIBLE CAUSE	SOLUTION		PROBLEM	POSSIBLE CAUSE	SOLUTION	Galanz Americas Limited Company - Product Warranty
ss the "Power" button, fill wa w 3 minutes for the refrigera	maker will stop automatically, and the "Water" indicator will be on. The "Power" button, fill water up to the level mark and press "Power" again. minutes for the refrigerant to settle before restarting. the maker automatically stops working when the ice basket is full and the "Ice Full"		"ICE FULL" indicator	Ice shovel is stuck or	Check if the ice is blocking the ice shovel, otherwise, press "POWER" button to turn off the ice maker and press it again to turn it on to see if it can make ice normally.			Leaving ice in the appliance for an extended period of time may result in the appliance recycling the ice by melting it down and	After extended period transfer	This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only. Galanz product is warrantied for one year following purchase for defects in material and workmanship. Please save your receipt as proof of purchase is required to make a warranty claim.During this period, we will
cator will be illuminated. Warning: Direct sunlight or sunlight reflection may cause infared for malfunction. If the unit does not stop, even ice cubes can obstruct sensor, move the where there is no sunlight.		is on for 3 seconds and off for 3 seconds.	the flip system is malfunctioning.	to see if it can make ice normaly. If the "ICE FULL"indicator is still on for 3 seconds and off for 3 seconds, press "POWER" button to turn off the machine and consult a certified technician.	The ice cubes are melting.	making a new batch. The ice maker is not designed to store ice for very long. Melting ice is normal operation if ice is not used or moved to	provide repair where possible, a purchase price refund, or a replacement at our discretion. The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed up on the original consumer purchaser upon purchase from an authorized retailer. In the event of a new home purchase, the warranty will begin with the date that ownership is assumed. This warranty does not cover and excludes damage or defects caused by: • Consumer misuse			
	not in use, drain all water in the tank reservoir.		Water is added, but "ADD WATER" indicator is illuminated and ice is not made.	Ice-Full sensor is malfunctioning.	Please consult a certified technician.			a cooler or freezer regularly. Ambient temperature or water temperature in inner tank is too high.	Please operate the ice maker below ambient temperature of 90°F and use cold water.	Abuse Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual Commercial use Subjecting the product to any voltage outside the specified range Loss of parts
PROBLEM	POSSIBLE CAUSE	SOLUTION Stop the ice maker, fill water, and		Ice making cycle is too long.	Stop the ice maker, and restart when the ice blocks melt. Select the small ice size.		Ice making cycle is normal but no ice is made.	Ice making cycle is normal but no ice is Refrigerant liquid leakage. Consult a qualified technician.	The affixing of any attachments not provided with the product Accident, or Use in a manner not intended and outlined in the user manual. Any subsequent damages caused by the above listed exclusions will not be covered and any claims	
INDICATOR IS ON.	Lack of water. Ice basket is full.	press "POWER" button again to restart the unit. Remove ice from ice basket.	Ice cubes stick together.	Water temperature in inner tank is too low.	Change the water in the reservoir. Use water between 45°F-90°F.			Pipe in the cooling system is blocked.	Consult a qualified technician.	determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any: • Retail offered extended warranties • Tax
o ice, but "ICE FULL" n dicator is illuminated.	I. Ice-Full sensor (transmitter and receiver) is covered by the impurities contained in water or other pollutants. 2. Ice-Full sensor is malfunctioning.	Use a soft cloth dip into water to clean the Ice-Full sensor. After cleaning, to see if the ice maker resume working, otherwise, please consult a certified technician.		Leaving ice in the appliance for an extended period of time may result in the appliance recycling the ice by melting it down and making a new batch.	Transfer ready-made ice to another container and store in a cooler or freezer to avoid recycling.		Incidental Every implie purpose is d the duration legal rights warranties c If you have.	Other charges(including postage to send required materials) Incidental and/or consequential damages associated with the product in question. Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warrantics or special, incidental, or consequential damaged, so the above limitations may not apply to you. If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738. For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.		
·	8			9				10		11

