

Galanz

Model: GTS311S2EWAQ18
Toaster Oven User Manual



Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 800-562-0738.

@2021 Galanz Americas Limited Company.

CONTENTS

Important Safety Instructions.....	2
Warning	2
Read before using.....	3
Grounding Instructions	4
Electrical Connections.....	4
Installation Guide	5
Important Tips	5
Product Diagram	6
Control Panel	7
Operation Instructions	8
Toast.....	8
Bagel.....	9
Air Fry.....	10
Conv.....	11
Bake.....	12
Roast.....	13
Broil.....	14
Rotiss.....	15
Keep warm.....	16
Dehy.....	17
Pizza.....	18
Cookies.....	19
Product Warranty.....	20

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using this appliance, some safety tips should always be followed. They include:

- Read all instructions carefully before using the appliance.
- The temperature of a working oven or a just used one could be very high, to avoid getting burned, do not touch.
- Close supervision is always necessary when this or any appliance is used near children. Do not place this appliance within reach of children.
- To prevent electric shock, do not immerse the power cord, the plug or any other parts of the appliance in water.
- Do not hang the power cord over the edge of a counter-top or near hot surfaces.
- Check the unit frequently for damages to the power cord, the plug or any other parts. If any damage is found, stop using the unit and take it to the nearest maintenance or repair center.
- Make correct and appropriate use of the accessories to prevent any man made damage.
- Do not put the toaster oven in a high-temperature environment. Please keep the toaster oven away from heat sources such as heating appliances or fire.
- When using the toaster oven, pull the unit out a minimum of ½ inch away from walls on all sides.
- Always unplug the oven after using or before cleaning. Let the appliance cool down completely before moving or cleaning.
- Do not cover the oven with metal foil, this will cause overheating of the appliance.
- Please take caution when removing hot foods or cookware accessories.

- Please do not attempt to cook oversized foods in the toaster oven. Cooking foods that are not proportionally correct to the size of the cavity could cause a fire or electrical shock.
- A fire may occur if the toaster oven is covered or comes in contact with flammable materials including curtains, draperies and walls etc., when in operation.
- Do not place any flammable materials in oven, such as paper, cardboard, plastic or anything that may catch fire or melt.
- Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.
- To turn this appliance off, shut off all function settings before unplugging it.
- Please use oven mitts when inserting or removing hot items from the oven.
- Please take caution when opening or closing the tempered glass door. There is a chance it may break due to improper usage. Please do not scratch or use sharp or abrasive cleaning supplies on the glass. If there are any scratches or nicks, stop using it and contact Galanz at 1-800-562-0738.
- Please operate the appliance in a well ventilated area. Please do not use outdoors.
- The product is intended for normal household use only. Do not use it for other unintended purposes.
- Place less than 3.5 lbs of food evenly onto the baking or roasting tray.
- Please be careful when lifting or moving the appliance as there might be some sharp edges.

IMPORTANT SAFETY INSTRUCTIONS

- Be careful not to be burned by hot surfaces of the working oven.
- This is a Y-connection appliance. Damage to the power cord needs to be fixed by professionals.
- Do not operate the appliance with an external timer or a separate remote control system.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

**CAUTION: BE CAREFUL TO AVOID BURNS
BY THE HOT SURFACES!**

READ BEFORE USING

If this is your first time using this appliance, please be sure to:


- Read this manual carefully before using the appliance.
- Remove protective film and sticker from the surface of the oven.
- Open oven door and remove all printed documents and papers from inside.
- Check and clean all accessories before using.
- Dry all accessories thoroughly before inserting them back in.
- Connect the appliance with a power source, when it is ready for use.
- Before using for the first time, preheat the oven at its maximum temperature for 15 minutes to eliminate any manufacturing residue that may remain after shipping. It is normal to experience some smoke coming out.

IMPORTANT SAFETY INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 2-wire extension cord that has a 2-blade grounding plug and a 2-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

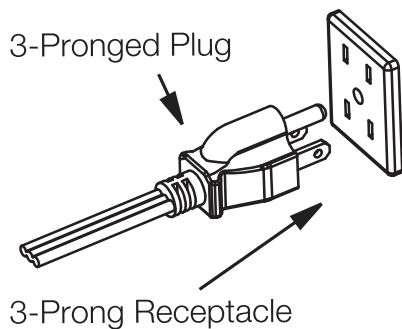

⚠ ELECTRICAL CONNECTIONS


A short power cord is provided to reduce risk of becoming entangled or tripping over a long cord, an extension cord may be used if care is exercised in its use.

- The electrical rating of the extension cord must be at least as great as the appliance. The extension cord must be arranged so that it will not drape over the counter-top or table-top where it can be pulled on by children or tripped over unintentionally.
- Fixing and replacement of the power cord must be done by professionals from the manufacturer's maintenance department or the relevant department.

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION GUIDE

- Make sure that all the packing materials are removed from the inside of the toaster oven.
- This oven must be placed on a flat, stable surface.
- For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
- The appliance shall be only used on a countertop over 3 feet (914mm) above the floor.
- Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.

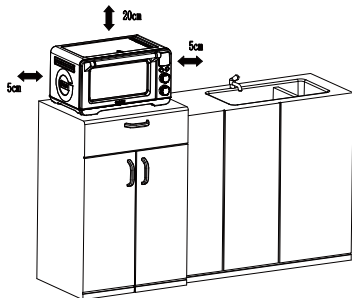

- Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surfaces.
- The socket must be readily accessible so the toaster oven can be easily unplugged in an emergency.

IMPORTANT TIPS

- For gourmet results please cook food that has already been defrosted.
- Frozen food and thick cuts of meat take longer to cook.
- Use the baking and roasting tray to cook foods containing liquids or fat to protect the heating elements from damage.
- Be careful when opening the toaster oven door as hot air can escape and cause burns.
- Make sure to use the crumb tray and clean the toaster oven regularly.
- Do not do any cooking with the door open.
- Do not place any accessories or cookware on top or in contact with the heating elements.
- Condensation is normal and can be seen on the glass door as the toaster oven heats up to the set temperature.

Power supply	120V/60Hz
Rated Power	1800W
Outside Dimensions	22.4 X 16.7 X 12.4 inches
Oven Capacity	1.1 Cu.Ft.
Net Weight	Approx.24 lbs

PRODUCT DIAGRAM

1. Oven Rack

Place your oven safe cookware here.

2. Air Fry Rack

Use this for Air Frying foods like chicken wings or cutlets.

3. Baking and Roasting Pan

For baking and roasting meat, fish and other foods. You can also utilize this pan to catch drippings during Air Fry and Rotisserie programs.

4. Crumb Tray

For collecting small amounts of oil or food crumbs.

5. Air Fry Basket

For Air Frying smaller foods like chicken nuggets or french fries.

6. Rotisserie Removal Tool

For removing the rotisserie spit.



7. Rotisserie Spit

For roasting chicken and other kinds of meats.

8. Glass Door


Transparent door allows you to see food cooking. It is made of tempered glass which is tougher and safer.

⚠ **Housing:** Please note the housing gets hot during operation.

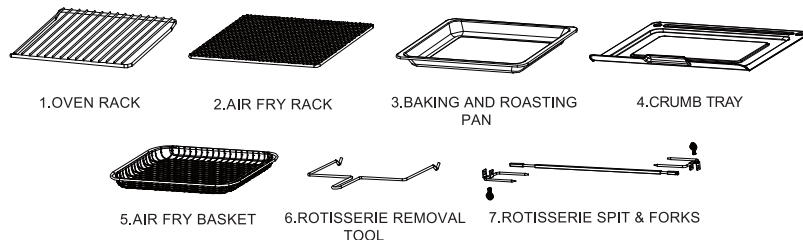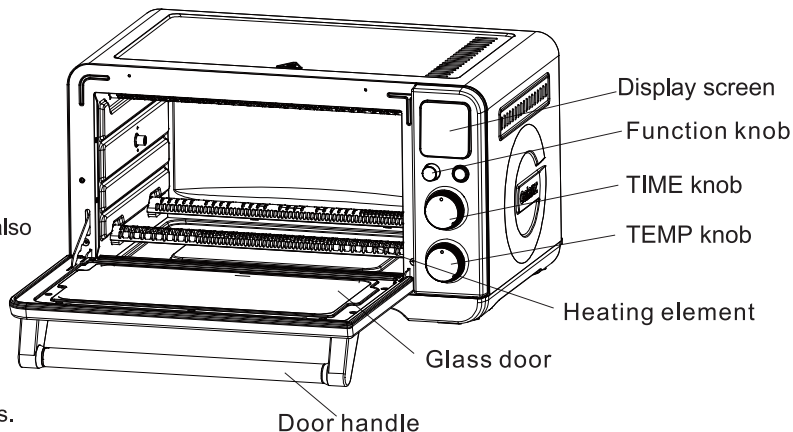

NOTE: There might be a slight difference of the product you bought from the above diagram.

CONTROL PANEL

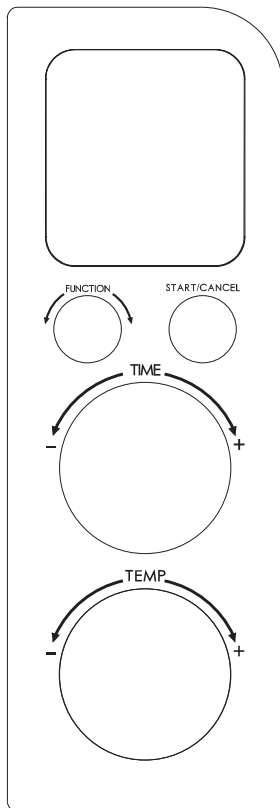

FUNCTION KNOB

This knob can be used to cycle through the cooking functions. There will be an audible beep when it is turned.

TIME

The time can be adjusted by turning this knob after the selection of the cooking function. Turn the knob left or right to adjust the time. Time will adjust in increments of +/-30 seconds below 10 minutes, +/-1 minute for 10-30 minutes, +/-5 minutes for 30 – 90 minutes

TEMP

The temperature can be adjusted by turning this knob after the selection of the cooking function. Turn the knob left or right to adjust the temperature. Temperature will adjust in increments of +/- 25 degrees

START/CANCEL

Starts or cancels a cooking function; If preheating, cancels preheating and starts the cooking function; Clears all settings and returns to standby after being pressed and held for 1.5 seconds.



NOTE

It is suggested to only use the appliance for 40 minutes in a two hour period unless it is being used in the Dehydration cooking function.

OPERATION INSTRUCTIONS

Toast


Accessory Guide:




For Toast function, six browning levels can be selected. The default temperature is 480°F.



Example: Toast to Level 6 of Browning


1 In standby mode, turn the **FUNCTION** dial to choose **TOAST** program.

**FUNCTION**





2 Turn the **TEMP** or **TIME** knob to choose Level 6.
(The default is Level 4)

**TEMP** or **TIME**

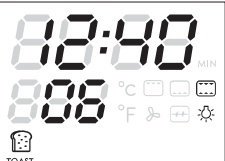

 3 Press the **START/CANCEL** button to start.





Level of Darkness	Longest cooking time
01	5:30
02	6:00
03	6:50
04	8:20
05	10:30
06	12:40

OPERATION INSTRUCTIONS

Bagel



Accessory Guide:



For Bagel function, six browning levels can be selected. The default temperature is 480°F.

Example: Bagel to Level 6 of Browning

- 1** In standby mode, turn the **FUNCTION** dial to choose **BAGEL** program.



FUNCTION




- 2** Turn the **TEMP** or **TIME** knob to choose Level 6.
(The default is Level 4)



TEMP or




TIME

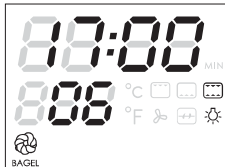

- 3** Press the **START/CANCEL** button to start.

START/CANCEL

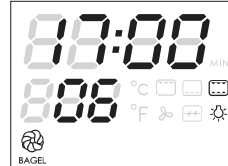

Level of Darkness	Longest cooking time
01	8:00
02	9:30
03	11:20
04	13:00
05	15:00
06	17:00

OPERATION INSTRUCTIONS

Air Fry



Accessory Guide:



For Air Fry function, cooking temperature can be selected between 350°F and 400°F. The longest cooking time is 90 minutes.

Example: Use Air fry function to cook for 30 minutes at 375°F.


- 1 In standby mode, turn the **FUNCTION** dial to choose **AIR FRY** program.



- 2 Turn the **TEMP** dial to choose temperature 375°F.




- 3 Turn the **TIME** dial to choose time 30 minutes.

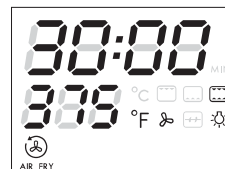

- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL

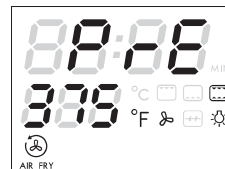

- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL




OPERATION INSTRUCTIONS

Conv



Accessory Guide:

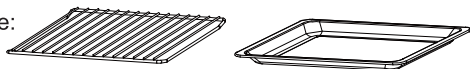

For Convection function, cooking temperature can be selected between 150°F and 450°F. The longest cooking time is 90 minutes.

Example: Use Convection function to cook for 45 minutes at 375°F.

- 1 In standby mode, turn the **FUNCTION** dial to choose **CONVECTION** program.



FUNCTION



- 2 Turn the **TEMP** dial to choose temperature 375°F.



TEMP



- 3 Turn the **TIME** dial to choose time 45 minutes.




TIME



- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL

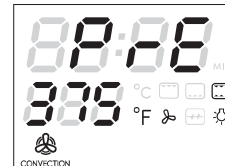

- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL




OPERATION INSTRUCTIONS

Bake



Accessory Guide:

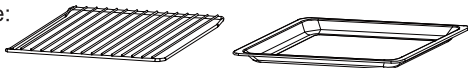

For Bake function, cooking temperature can be selected between 275°F and 425°F. The longest cooking time is 90 minutes.

Example: Use Bake function to cook for 40 minutes at 375°F.

- 1 In standby mode, turn the **FUNCTION** dial to choose **BAKE** program.



FUNCTION



- 2 Turn the **TEMP** dial to choose temperature 375°F.



TEMP



- 3 Turn the **TIME** dial to choose time 40 minutes.



TIME




- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL



- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL

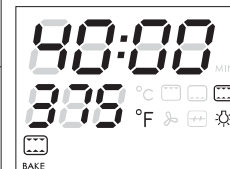


OPERATION INSTRUCTIONS

Roast



Accessory Guide:

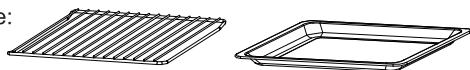


For Roast function, cooking temperature can be selected between 150°F and 450°F. The longest cooking time is 90 minutes.

Example: Use Roast function to cook for 40 minutes at 375°F.

- 1 In standby mode, turn the **FUNCTION** dial to choose **ROAST** program.



- 2 Turn the **TEMP** dial to choose temperature 375°F

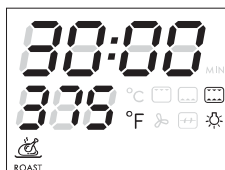


- 3 Turn the **TIME** dial to choose time 40 minutes.



- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL

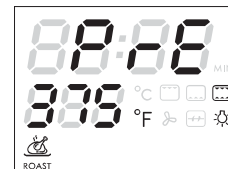

- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL




OPERATION INSTRUCTIONS

Broil



Accessory Guide:

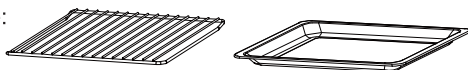

When using the Broil function the cooking temperature can not be selected. The default temperature is 450°F. The longest cooking time is 30 minutes.

Example: Use Broil function to cook for 15 minutes.

- 1** In standby mode, turn the **FUNCTION** dial to choose **BROIL** program.



- 2** Turn the **TIME** dial to choose time 15 minutes.



- 3** Press **START/CANCEL** button to start cooking.



OPERATION INSTRUCTIONS

Rotiss



Accessory Guide:



For Rotisserie function, cooking temperature can be selected between 150°F and 450°F. The longest cooking time is 90 minutes.

Tips:

1. Place the food tray in the lower rack position to collect drippings.
2. ① Place the whole chicken (or other food) on the rotisserie shaft
② Place the rotisserie forks on either side of the shaft and insert them into the chicken to secure it on the shaft. Truss the chicken with butcher's twine so that the wings and legs are held together.
- ③ Tighten the knobs on the forks to secure them.


Example: Use Rotisserie function to cook for 45 minutes at 325°F.



- 1 In standby mode, turn the **FUNCTION** dial to choose **ROTISSERIE** program.



- 3 Turn the **TIME** dial to choose time 45 minutes.

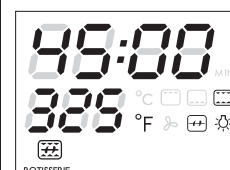

- 2 Turn the **TEMP** dial to choose temperature 325°F.



- 4 Press **START/CANCEL** button to start cooking.

START/CANCEL



OPERATION INSTRUCTIONS

Keep Warm




Accessory Guide:




For Keep Warm function, cooking temperature can be selected between 125°F and 175°F. The longest cooking time is 90 minutes.

Example: Use Keep Warm function to cook for 40 minutes at 150°F.

- 1** In standby mode, turn the **FUNCTION** dial to choose **KEEP WARM** program.

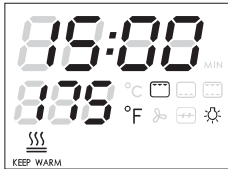


- 2** Turn the **TEMP** dial to choose temperature 150°F.

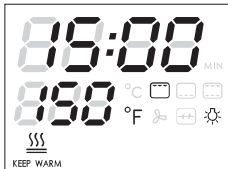

- 3** Turn the **TIME** dial to choose time 40 minutes.



- 4** Press **START/CANCEL** button to start cooking.

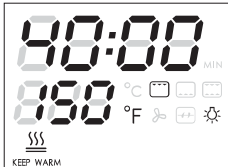

OPERATION INSTRUCTIONS

Dehy



Accessory Guide:



When using the Dehy function the cooking temperature can not be selected. The default temperature is 150°F. The longest cooking time is 12 hours.

Example: Use Dehy function to cook for 10 hours at 150°F.

- 1** In standby mode, turn the **FUNCTION** dial to choose **DEHY** program.




FUNCTION



- 2** Turn the **TIME** dial to choose time 10 hours.



TIME

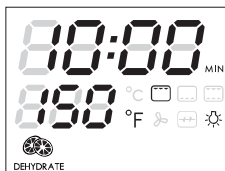

- 3** Press **START/CANCEL** button to start cooking.

START/CANCEL



OPERATION INSTRUCTIONS

Pizza



Accessory Guide:



For Pizza function, cooking temperature can be selected between 350°F and 450°F. The longest cooking time is 90 minutes.

Example: Use Pizza function to cook for 20 minutes at 375°F.

- 1 In standby mode, turn the **FUNCTION** dial to choose **PIZZA** program



FUNCTION



- 2 Turn the **TEMP** dial to choose temperature 375°F




TEMP



- 3 Turn the **TIME** dial to choose time 20 minutes.



TIME

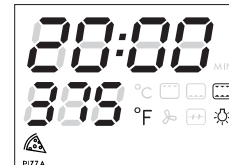


- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL



- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL

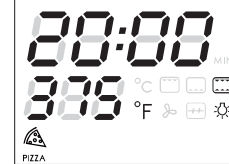

OPERATION INSTRUCTIONS

Cookies



Accessory Guide:




For Cookie function, cooking temperature can be selected between 200°F and 450°F. The longest cooking time is 90 minutes.

Example: Use Cookie function to cook for 20 minutes at 375°F.

- 1 In standby mode, turn the **FUNCTION** dial to choose **COOKIES** program.




FUNCTION

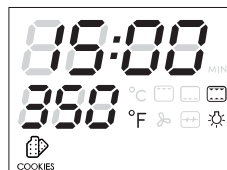

- 2 Turn the **TEMP** dial to choose temperature 375°F



TEMP

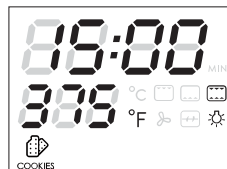

- 3 Turn the **TIME** dial to choose time 20 minutes.




TIME




- 4 Press **START/CANCEL** button to start preheating or press again to skip preheating. When preheating is finished the oven will beep once, open the door and put the food in the oven.

START/CANCEL

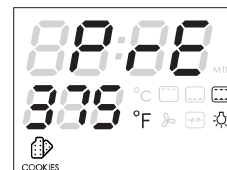

- 5 Press **START/CANCEL** button to start cooking.

START/CANCEL

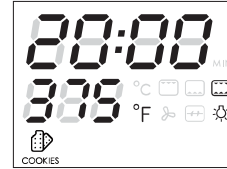

PRODUCT WARRANTY

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is under warranty for one year following purchase for defects in material and workmanship. Please save your receipt as proof of purchase is required to make a warranty claim. During this warranty period, we will provide the purchase price of this product or the equivalent or repair per our discretion.

The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer.

■ **This warranty does not cover and excludes damage or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Accident, or use in a manner not intended and outlined in the user manual.
- Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the

- purchase price and does not include any:
- Retail offered extended warranties
- Tax
- Other charges (including postage to send required materials) Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

WARRANTY REGISTRATION

Please mail this warranty card to address below within 30 days of purchase.

Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.

PLEASE PRINT CLEARLY.

Name_____

Address_____

City_____State_____Zip_____

Phone_____Email_____

Model Number_____Serial Number_____

Purchase Location_____

You must attach a copy of your purchase receipt to validate your registration.

Galanz