Galanz

REFRIGERATOR
INSTRUCTION MANUAL

Model No.:

GLR74BDRD12
GLR74BWER12
GLR74BBER12

To ensure proper use of this appliance and for your safety, please read the following instructions completely before operating this appliance.

TABLE OF CONTENTS

Parts and Features 1
Important safety instructions 2
Important grounding instructions 4
Installation Instructions 4
Instructions for usage 5
Cleaning 5
Defrosting 5
Disconnecting the appliance 6
Vacation 6
User notifications 7
Moving the refrigerator 7
Troubleshooting tips 8
Install the door handles 10
Maintenance 11
Specifications 12
Limited warranty 13

SAVE THIS INFORMATION FOR FUTURE REFERENCE

Galanz

Bottom Mount Refrigerator

Important notice: Please keep this appliance standing upright during transportation, if the unit must be laid on its side at any time, please stand the appliance upright for at least 4 hours before using.

For all consumer questions or inquiries, please contact our U.S. customer service line at 800-562-0738 .

PARTS AND FEATURES

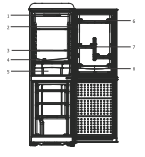

1. Lamp and temperature control knob
2. Lamp switch
3. Glass shelf
4. Fresh Safe shelf
5. Vegetable crisper
6. Door shelves
7. Shelf above tray
8. Bottom door bin

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

Read all instructions before using the appliance.

1. This appliance must be grounded. Connect only to properly grounded outlet. See Grounding instructions in the Installation Instructions.
2. Install or locate this refrigerator only in accordance with the provided Installation Instructions.
3. To protect against electric shock, do not clean cord, plug, or refrigerator in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning or other maintenance.
6. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
7. This appliance should be serviced only by qualified service personnel. Contact your nearest authorized service facility or call Galanz's customer service number for information or examination, repair, or adjustment.
8. Do not cover or block any openings on or vents on this appliance.
9. Do not store in this appliance gasoline, do not use this appliance near water, for example, near a bathtub, kitchen sink, in a wet basement, near a swimming pool, or similar locations.
10. Do not locate this appliance near heat sources or open flames.
11. Do not use or store gasoline or other flammable vapors and liquid in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
12. Do not place heavy objects or magnet items on top of the refrigerator.
13. Do not damage the refrigerant circuit. Refrigerant is flammable. Do not attempt to damage the cooling system during the transportation and installation.
14. To minimize the risk of possible ignition due to improper service or the use of incorrect parts, this unit must be serviced by factory authorized personnel only.

NOTICE!

1. When you load food into container, don't put the bag, outer is, for it may cause damage and create a fire hazard.
2. Don't put water on the rear of the appliance, for it may cause malfunction or electric shock.
3. Don't store inflammable materials such as ether, benzene, LP gas and alcohol in the refrigerator.
4. Don't place bottled beverage in the freezer, so as to prevent breaking.
5. If a better ice shape is desired, the tray of ice maker which is magnetic, heavy, or has a flexible bottom can be used. Please follow the instructions of the tray. Please do not use sharp objects to scrape ice, such as knives, forks, ice picks, and axes.
6. The refrigerant of this product is thane, which is inflammable. So, make sure not to damage the cooling system during the transportation and installation.
7. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

DANGER: RISK OF CHILD ENTRAPMENT

Before you throw away your old refrigerator or freezer:

1. Take off the doors.
2. Leave the shelves in place so that children may not easily climb inside.

Refrigerants

This refrigerator product contains refrigerants, which under federal law must be removed prior to product disposal. If you are getting rid of your old refrigerator product, check with a qualified disposal company for instructions.

IMPORTANT GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an operating malfunction or a possible breakdown, the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.

WARNING-Improper use of grounding can result in a risk of electric shock.

1. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

2. If it is necessary to use an extension cord, use only 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked electrical rating of the extension cord should be equal to or greater than the rating of the appliance.

INSTALLATION INSTRUCTIONS

1. Before using this refrigerator for the first time, remove all the packing materials, including the foam liners and adhesive tape holding accessories in place.
2. The refrigerator should be located on a firm, flat surface that is strong enough to support the refrigerator when it is full loaded.
3. Choose a location that is not exposed to direct sunlight, high temperatures, heat sources such as a stove or radiator, or in a moist area. Do not choose a location that is extremely cold or dry as the refrigerator will be unable to use the refrigerator to set function properly.
4. Leave a minimum of 10" between each side of the appliance and the wall, the top and back of the appliance should have a minimum of 10" clearance, this allows for proper air circulation. This appliance is intended to be freestanding and should not be built-in or placed in a recessed area.
5. The refrigerator feet must be adjusted during installation in order to function properly. The back is higher the front corners can be adjusted by turning clockwise to raise the appliance, and counter-clockwise to lower it. Be sure to have the unit level since slightly backward to ensure that the door closes tightly.

INSTRUCTION FOR USAGE

The temperature of refrigerator can be controlled manually by the knob. Temperature can be adjusted from warmer to colder. Please don't adjust the temperature too frequently. Instead, the proper time is about 24 hours for the interior temperature will be achieved. "0" stands for the lighest temperature setting. The temperature in every compartment will rise at the lowest degree under this level, and it is advised to select 1 or 2 in the hotter environment, or please choose higher level. Please don't choose "0" for long time, for it may cause the motor to be damaged and the lower interior temperature is required, switch knob to "0", when a higher one is needed.

CLEANING

Interior

Clean the interior of the appliance with a mixture of warm water and laundry soda, using about 2 tablespoons per quart of water. Use a sponge or soft cloth and wipe surfaces dry. Do not use abrasive cleansers as they will damage the finish. Rinse thoroughly with warm water and dry with a clean, soft cloth.

Exterior

The exterior surfaces can be cleaned using warm water and a mild detergent. Rinse thoroughly and dry with a clean, soft cloth.

Door Gasket

The door gasket must be kept clean to ensure a proper seal. Be sure to clean the gasket frequently, using the method described above.

DEFROSTING

Frost build-up on the wall of the freezer section will increase energy consumption and reduce the efficiency of the appliance. Defrost the freezer section whenever the frost reaches a thickness of ¼".

1. Remove food from the refrigerator and freezer compartment.
2. If your model has a dairy bin, be sure to open it under the freezer compartment to collect water. It may be necessary to empty the dairy bin during the defrosting process.
3. Turn the unit off and unplug it from the outlet.

4. The defrosting process can take several hours. Drain the door to speed up the defrosting.
5. When defrosting is completed, wipe the compartment with a soft cloth to remove any remaining water.
6. Reset the refrigerator temperature, following the operating instructions on page 5.

ATTENTION: Do not use sharp or pointed objects to remove frost or ice from the surfaces of the freezer compartment. This can cause damage to the compartment walls and cooling coils, and void the warranty.

DISCONNECTING THE APPLIANCE

After power failure, even in summer, the refrigerator can store food normally for several hours.

1. Discrete action during power failure

After power failure, do not eat additional food in the appliance and reduce the times of door opening. Please put in a container if the power failure is known beforehand.

2. Discrete action during vacation

Please remove the ready eatten food from the fridge before short vacation. After such vacation, clean the door firmly. After a long vacation, please remove all the food and cut off the power. After defrosting, open a the door of the appliance and ventilate it, and leave the door open.

3. Disposing

Please put the refrigerator in discard after using for a long time, please cut off the outlet and clean up the appliance. The door should be kept open in order to prevent unpleasant smell caused by food remains.

Attention	Under special condition do not stop and restart the appliance frequently, either switching off the power, disconnection or at least 5 minutes before restarting.

VACATION

Before leaving on any vacation, remove food that could spoil while you are away. If you plan to be for an extended period of time, we recommend that all of the food should be removed from the appliance and it should be turned off and unplugged from the outlet. The door should be propped open as directions provided in the Cleaning section of this manual, and leave the door open.

USER NOTIFICATIONS

1. Do not splash water on the refrigerator, as it may cause oxidation and malfunction. Electronic components such as on/off button may be damaged.
2. Operators such as soap powder, abrasive cleaning powder, diluted cleansers, chemical fluid, hot water, benzene, thinner, polishing powder, brush, etc. Improper use of these cleansers/operators will not only damage the painted cases and shelves.
3. Smear can damage the interior plastic components, so wipe it as soon as possible.
4. Please check the points below after maintenance:
   (1) Is the power cord damaged? Is the plug loose or worn ?
   (2) Can the plug be put in the socket reliably and smoothly?
   (3) Is the plug burning unconventionally?

Warning	Please get rid of the patient of the door before the disposal. The aforesaid scenario should be handled by professional staff, as it may be harmful to the environments.

MOVING THE REFRIGERATOR

1. Turn off the refrigerator and unplug from the outlet.
2. Remove all food and securely close all interior items inside.
3. Tape the door shut.
4. Do not lift or pull the door of door hands during transportation.
5. When moving, the appliance can not be tilted over 45 degrees as possible damage to the sealed system could occur.
6. Take care to avoid strong vibration or impact to the appliance.

TROUBLESHOOTING TIPS

Problem	Possible Cause	What to do
Refrigerator does not operate.	• Not plugged in tightly.	• Unplug, wait 10 seconds, then plug in again.
	• Tripped circuit breaker or blown fuse.	• Reset circuit breaker or replace fuse.
	• Problem with electrical outlet.	• Consult with a professional electrician.
Refrigerator seems to run too long or does not seem to cool.	• Temperature setting is too warm.	• Lower the temperature setting.
	• Door was open too frequently.	• This is normal.
	• Door not closed tightly.	• Check to make sure nothing is blocking the door so it closes tightly.
	• Warm weather.	• This is normal.
	• Door was opened frequently or for too long.	• This is normal.
	• Large amount of food placed in refrigerator.	• Allow the unit to cool for several hours.
	• Door not closed tightly.	• Check to make sure nothing is blocking the door so it closes tightly.
	• Door was opened too frequently or for too long.	• This is normal.
Moisture forms on the outside of the appliance.	• This is normal during periods of high humidity.	• Wipe the outside dry using a soft cloth.
	• The door is slightly open.	• Check the door tightly.
Moisture forms on the inside of the appliance.	• This is normal during periods of high humidity.	• This is normal.
	• Door was opened too frequently or too long.	• Do not open the door too long or too frequently.
Vibration noise	• Refrigerator is not on uneven surface.	• Adjust the feet to level the unit.
	• Items transfer is touching it.	• Move the refrigerator away from the items.

The following are normal conditions that can be encountered during the operation of this appliance:

- The flow of refrigerant through the coil can create a noise.
- The parts of the unit may become warm as a result of the cooling function.

INSTALL THE HANDLES

1. Take out accessory from packing bags: two handles, two shake handle covers, and six screws.
2. Prepare a cross screwdriver.
3. Remove the smear lids sealing tape on the door.

4. Make sure the three screw holes in the shake hands are aligned with those in the door, and then respectively screw three together. The right side one is suggested to be preferred to be screwed down.

5. Install handle cover on the handle.
   Tips for the steps to install:
   (1) Buckle the handle on the left side first.
   (2) Buckle the handle on the left side.
   (3) Buckle the middle part of the handle tightly in the end. And an click can be heard if the handle is properly installed.

MAINTENANCE

The appliance needs to be maintained and cleaned frequently. For your safety, do please cut the plug out of the socket before the cleaning.

1. Exterior maintenance
   Clean the interior of the appliance with clean water or neutral detergent.Wipe it with clean water and wipe it with a piece of dry cloth.

2. Maintenance of door gasket
   It is easy to damage if the door gaskets are pollated by the dust (paint), sauce and tea, so it is better to clean them careful.

3. Other maintenance
   Wipe the display with a piece of dry cloth ,clean it with neutral detergent necessary.

SPECIFICATIONS

Electric shock protection type		I
Capacity (cu.ft)	Freezer	2.4
	Refrigerator	4.2
Input (VAC)		120
Frequency (Hz)		60
Current (A)		1.1
Voice (dB(A))		≤ 42
Refrigerant		R600a/12.5 oz
Net weight		102.2 lbs
Interior temperature (F)	Freezer	≤-6°F
	Refrigerator	32~46.4
Unit dimensions (in inches)	Width	20.79
	Depth	21.89
	Height	44.49

Limited Warranty

This warranty extends to products purchased and used in the U.S.A. This is the only express warranty for this product and is in lieu of any other warranty.

This product is warranted to be free from defects in material and workmanship for a period of one(1) year from the date of original purchase, except as noted below. During this period, we will repair or replace this product at our option.

This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect including failure to clean product regularly in accordance with manufacturer's instructions, use for commercial purposes, or any use not in conformity with the printed directions.

We exclude all items for normal, incidental and consequential damages caused by any defect in this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. **Any implied warranty, including any statutory warranty or merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law. In which case such warranty is limited to the duration of the written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, please call our CUSTOMER SERVICE NUMBER. For faster service, please have model, serial, and type numbers ready for operator to assist you.

CUSTOMER SERVICE NUMBER
1-(800)-562-0738

KEEP THIS MANUAL FOR FUTURE REFERENCE!!
Manufacturer: Zhongshan Galanz Consumer Electric Appliances Co., Ltd. Guangdong 528429